

1-Motor Walker

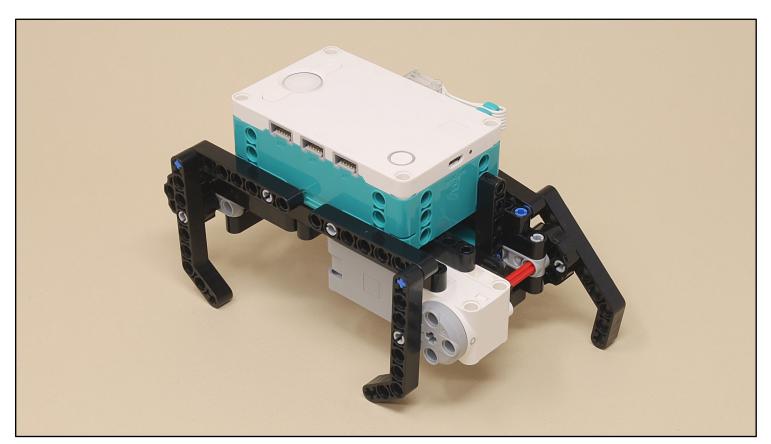

Scroll for building instructions

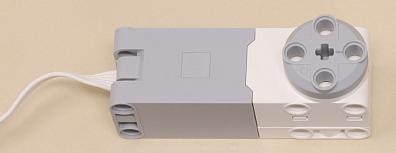

©2022 by Dave Parker
























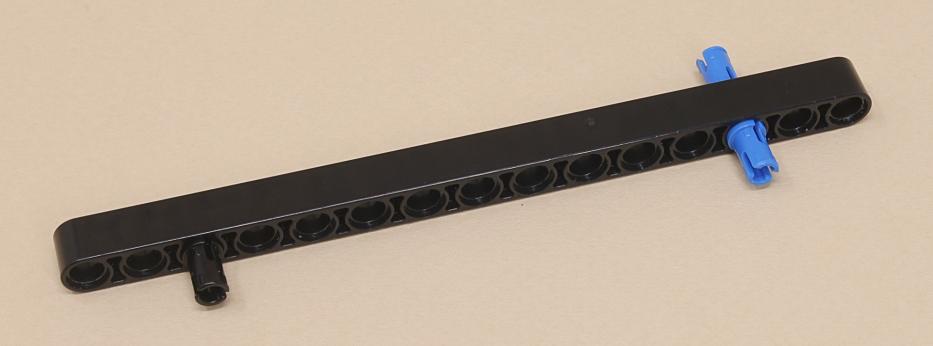


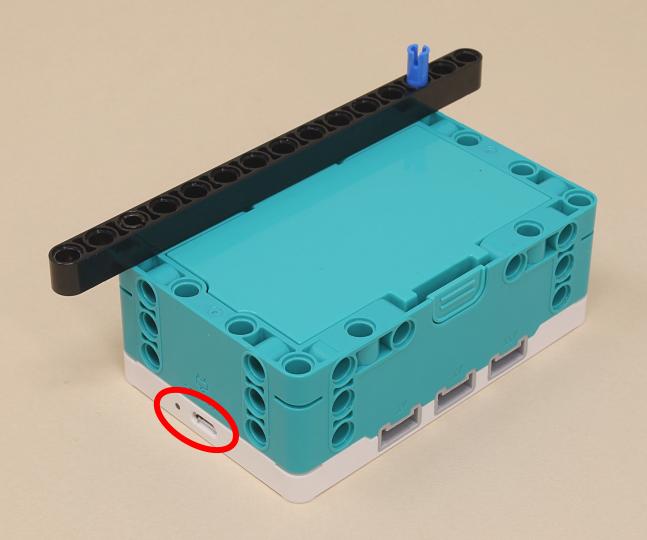

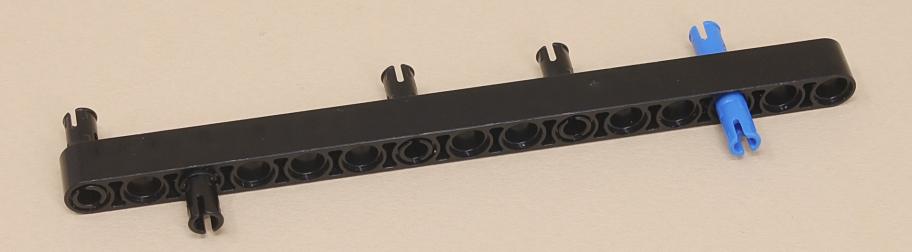


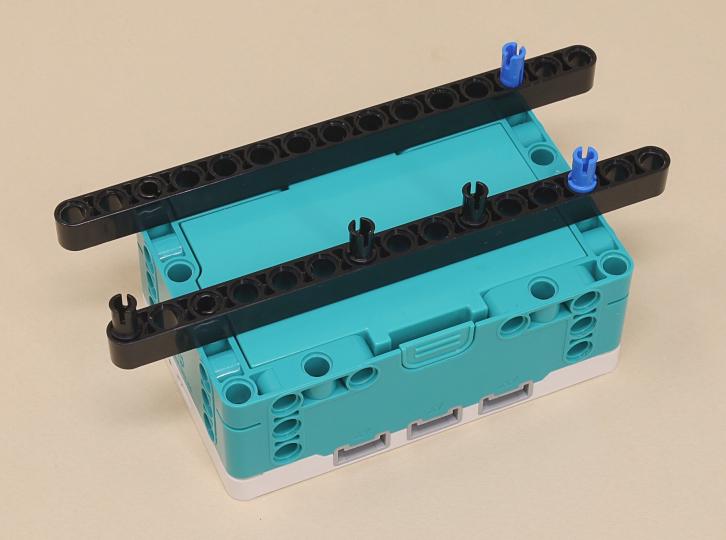


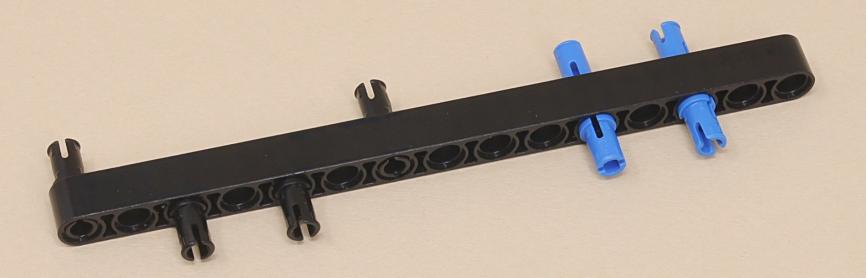

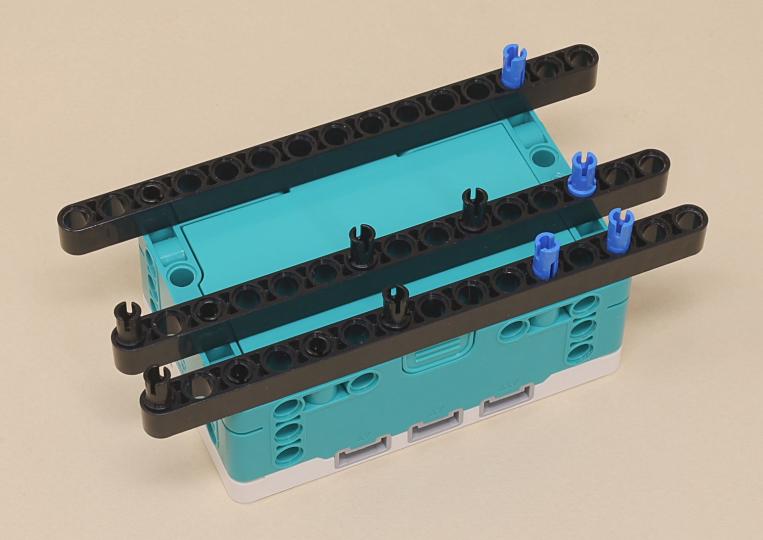





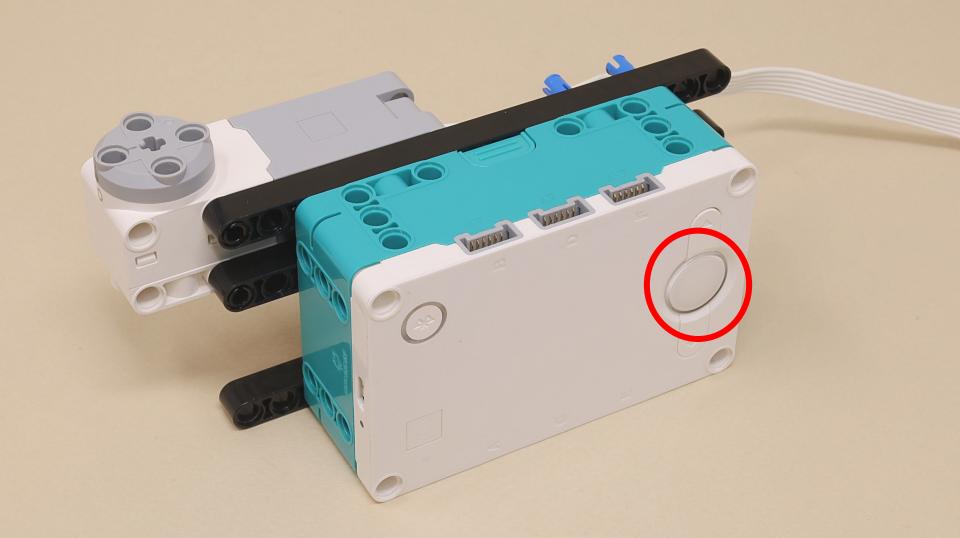


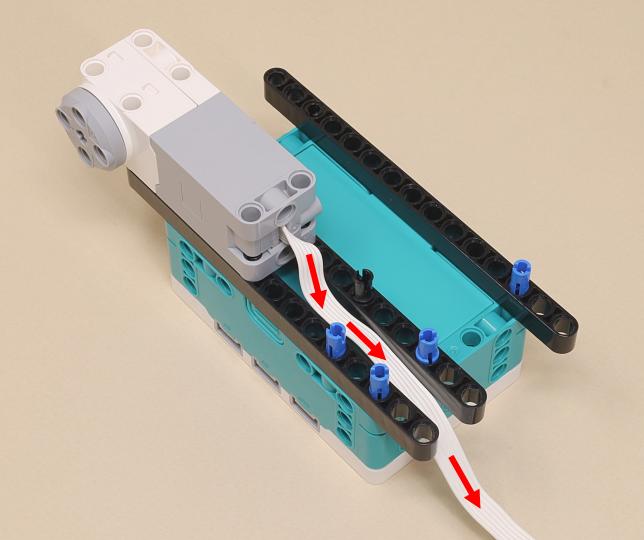




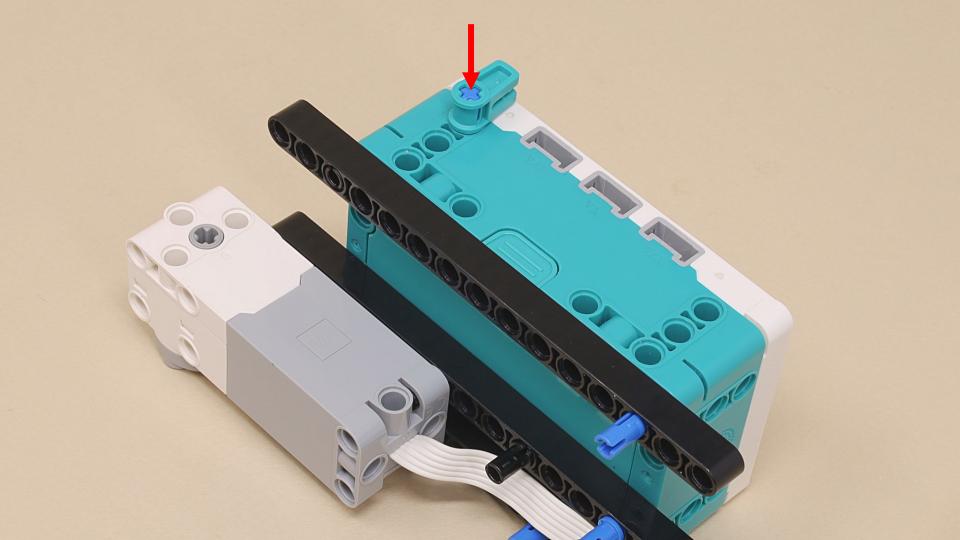

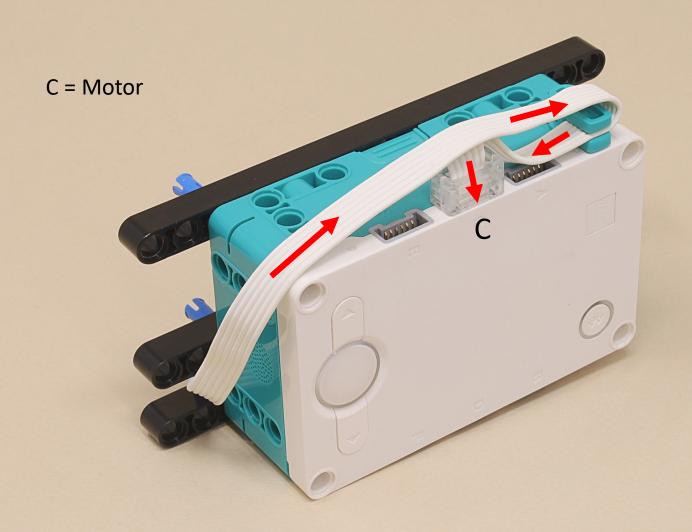

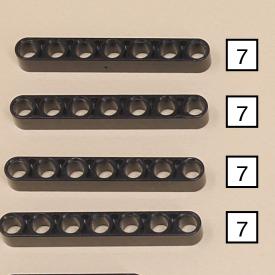

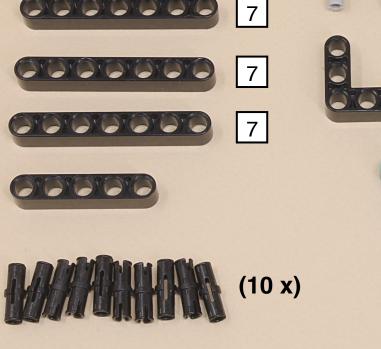


















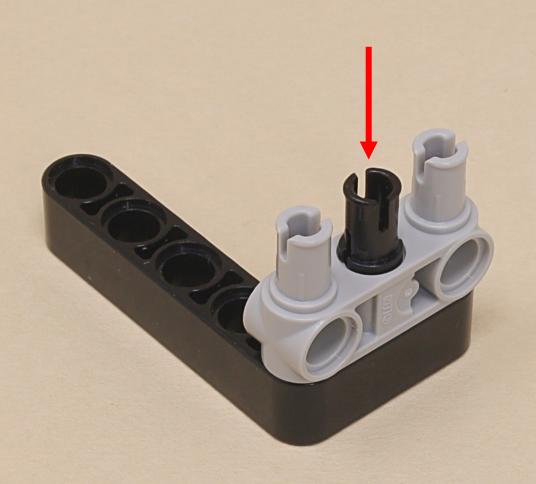


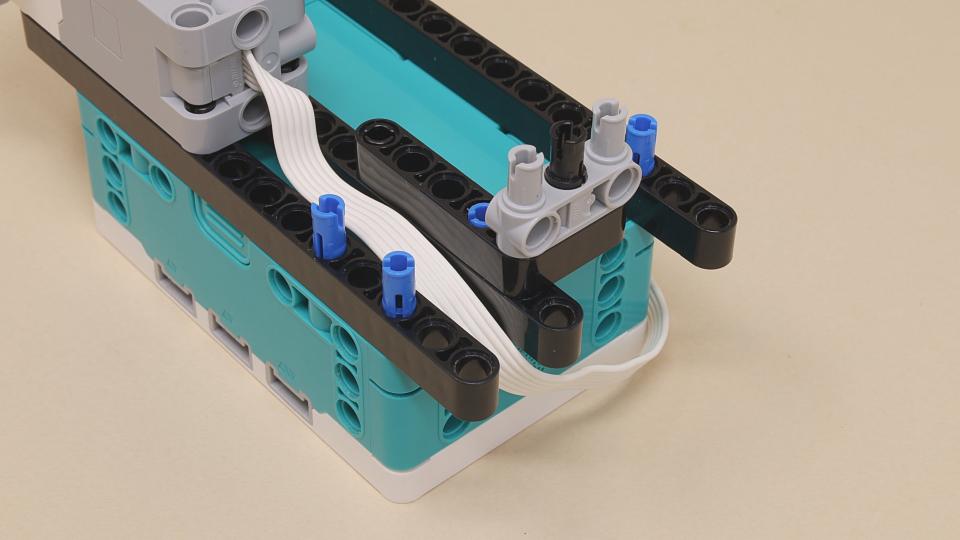





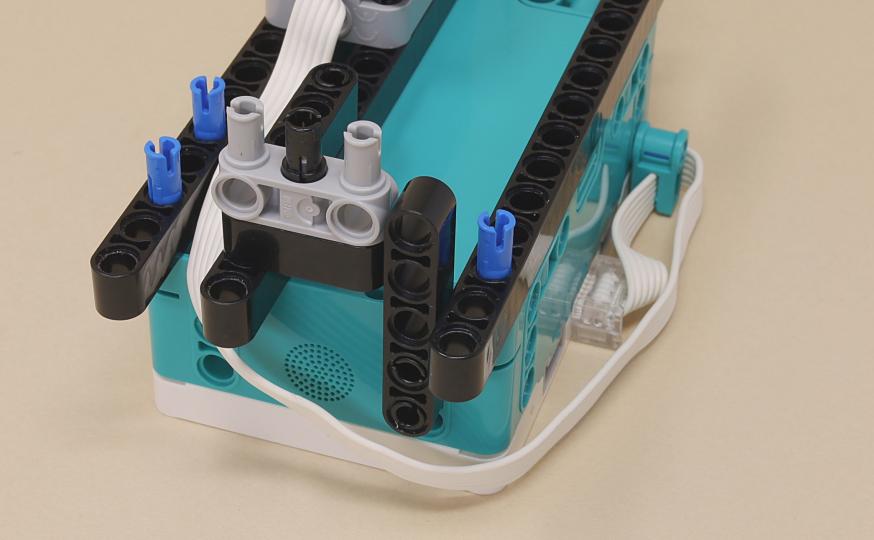




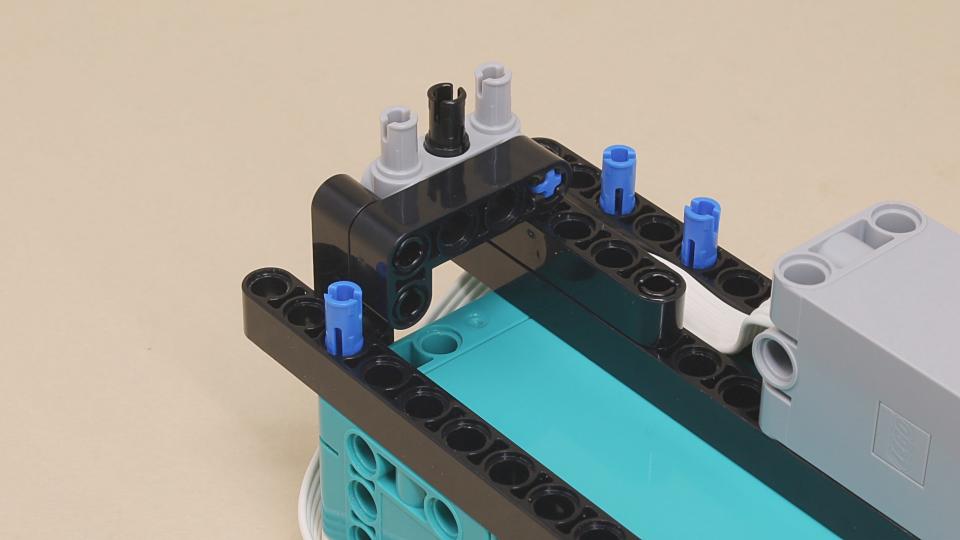

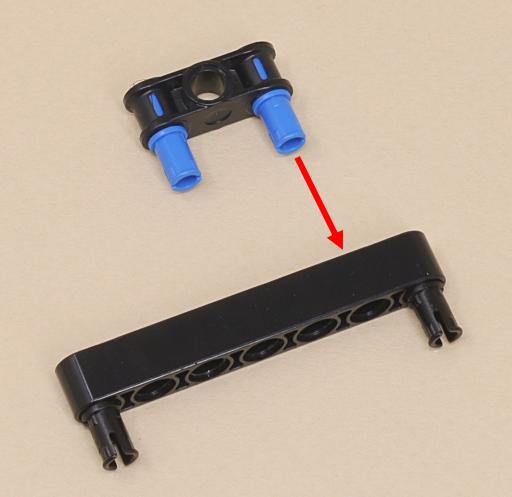


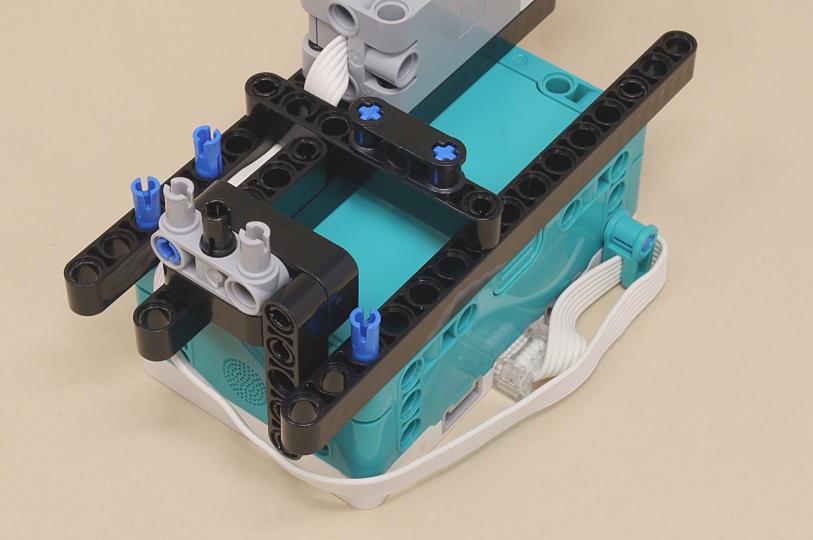


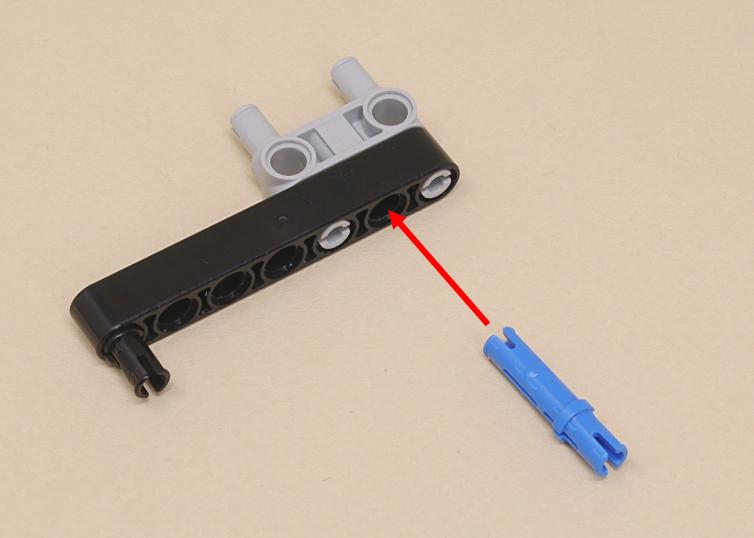


(3x)




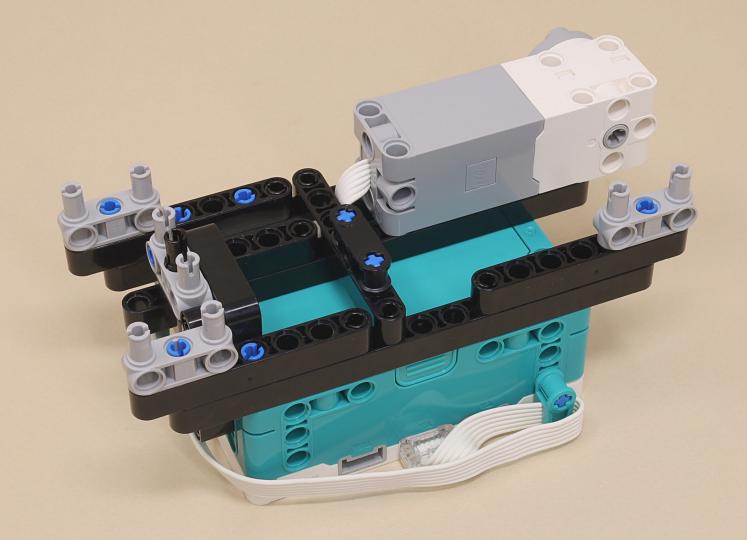


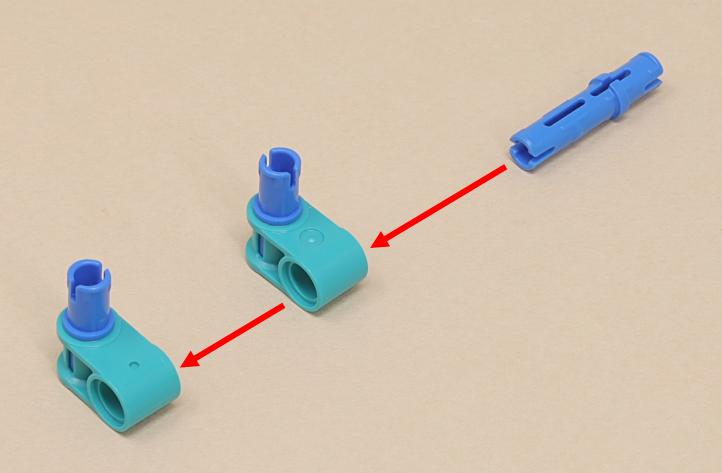





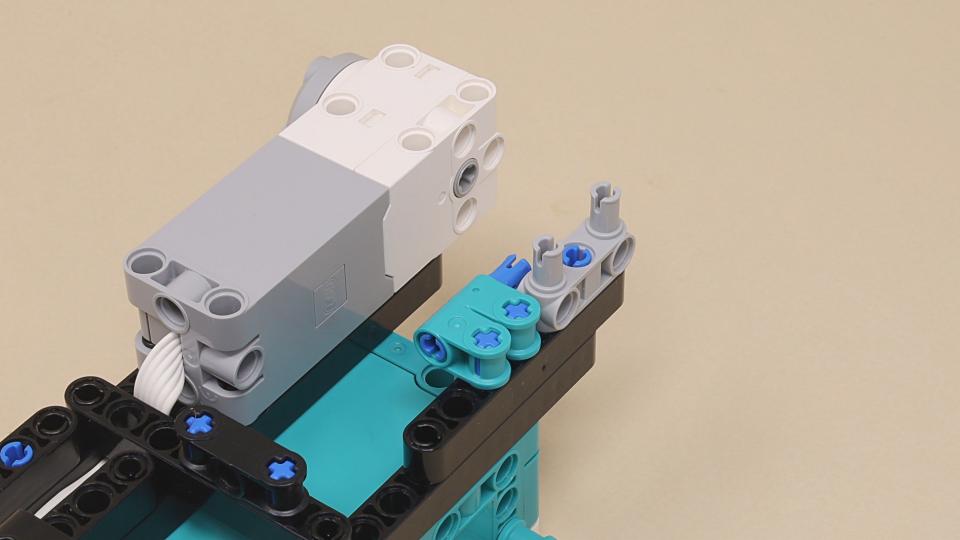

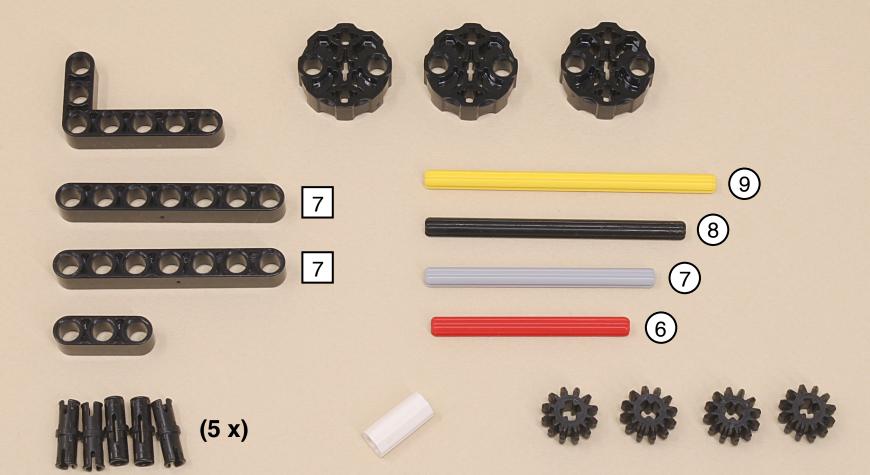

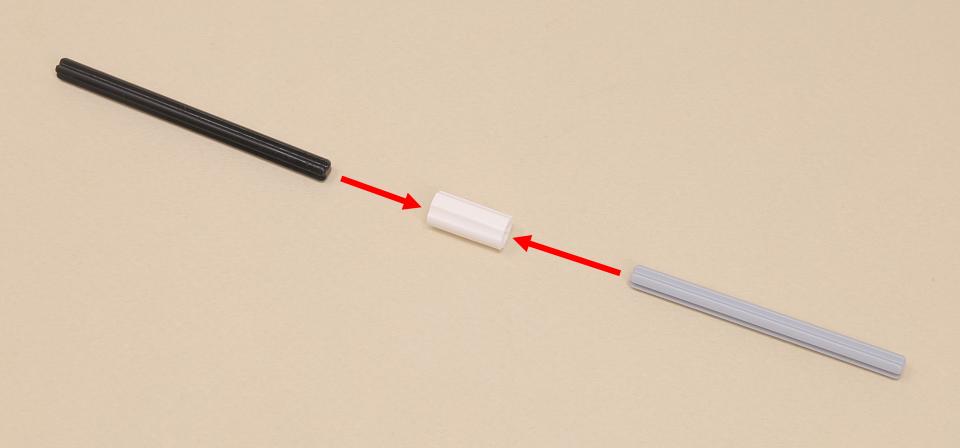


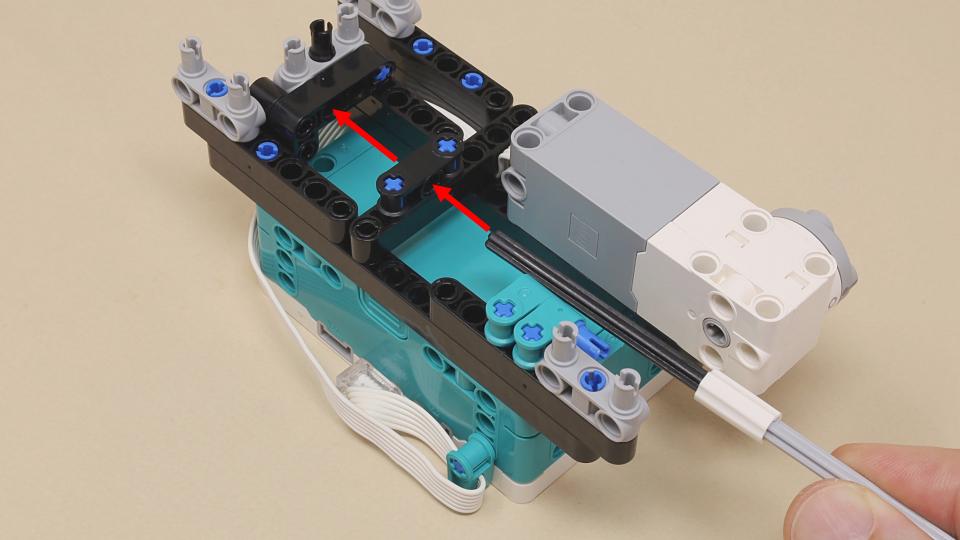

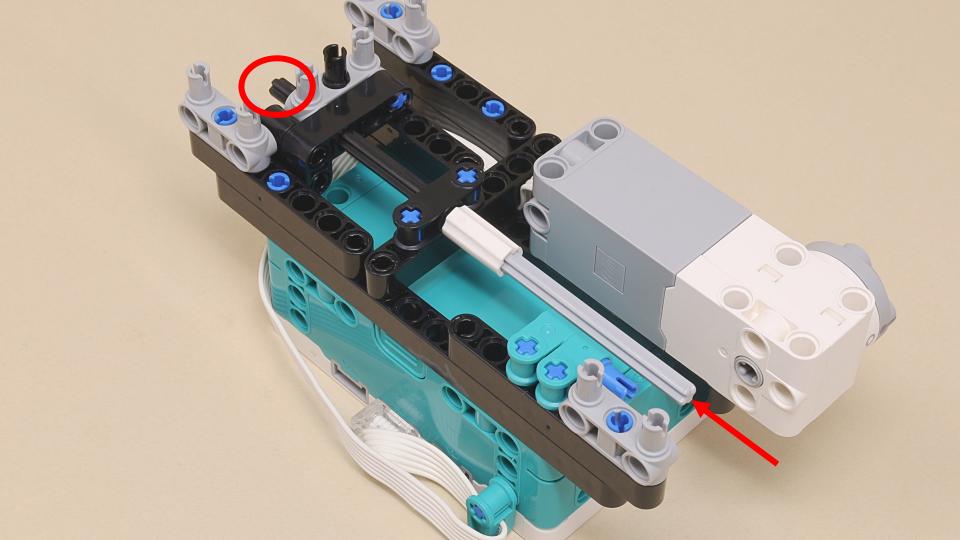







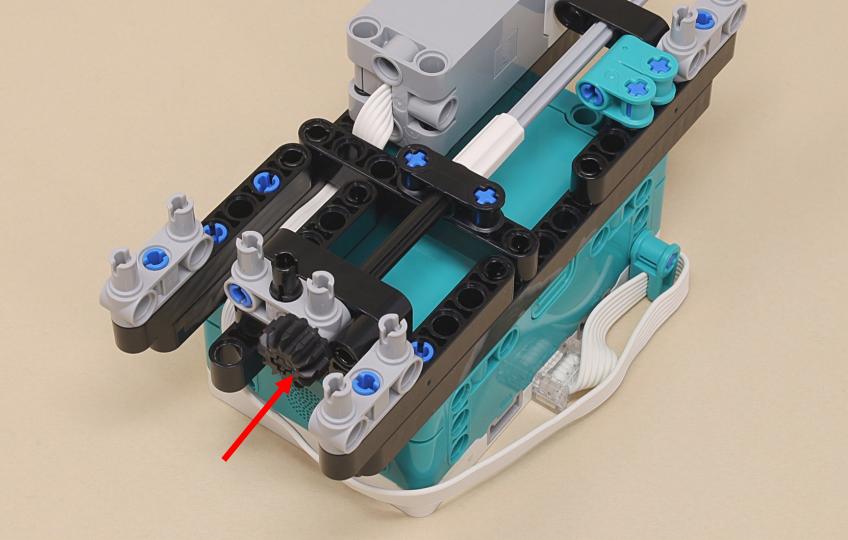



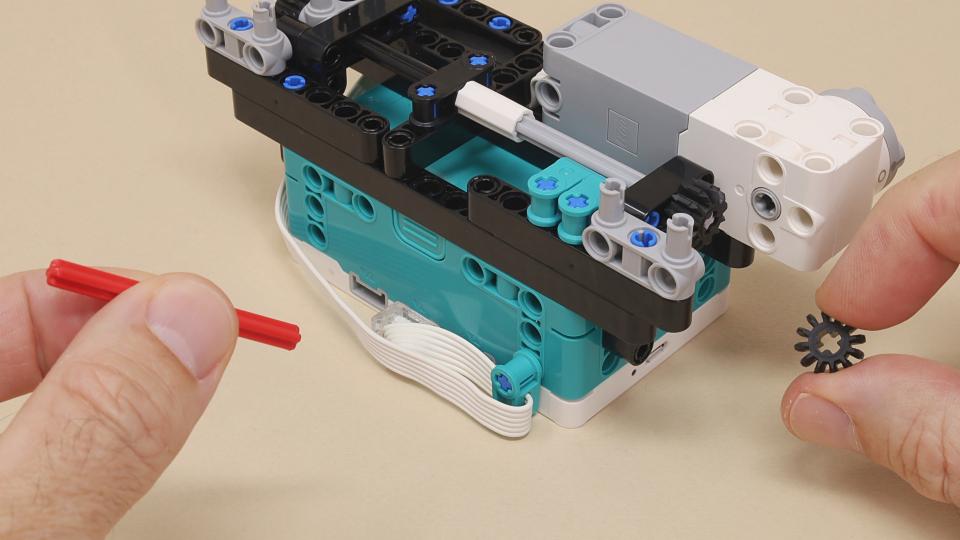




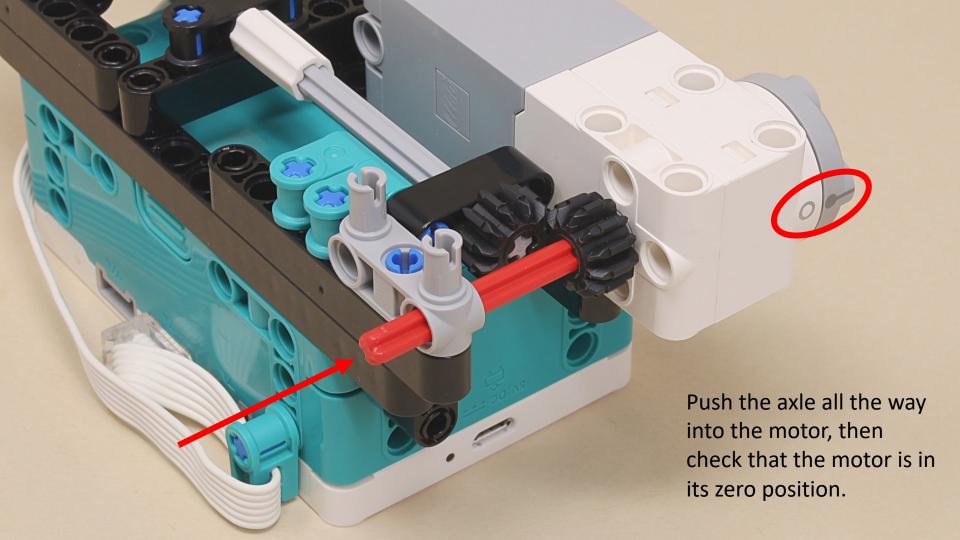



Hold the gear here and rotate it so the cross-axle hole is aligned straight as shown.







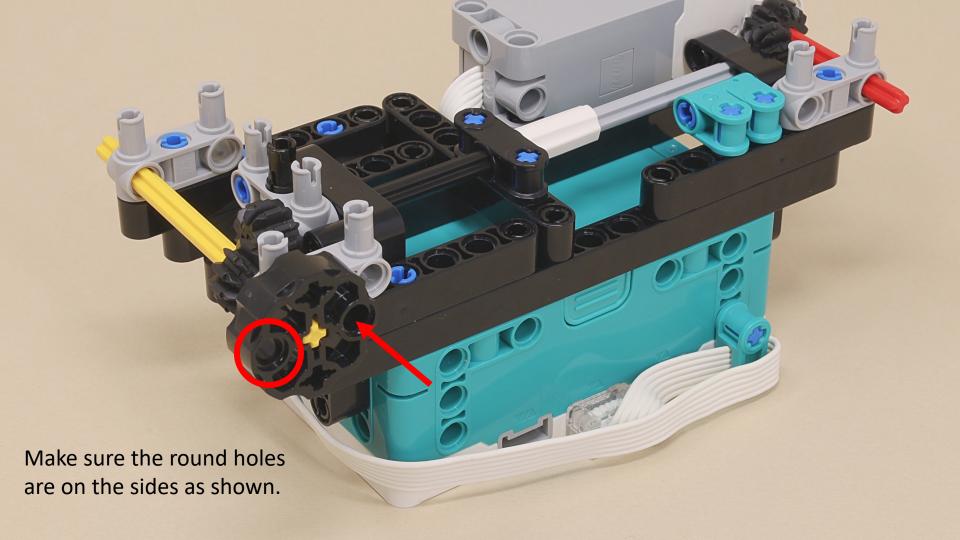

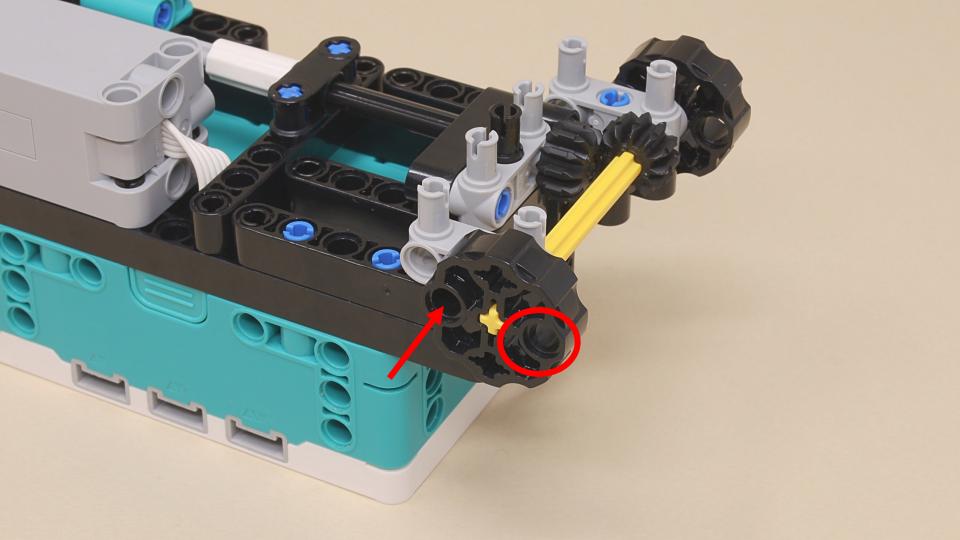


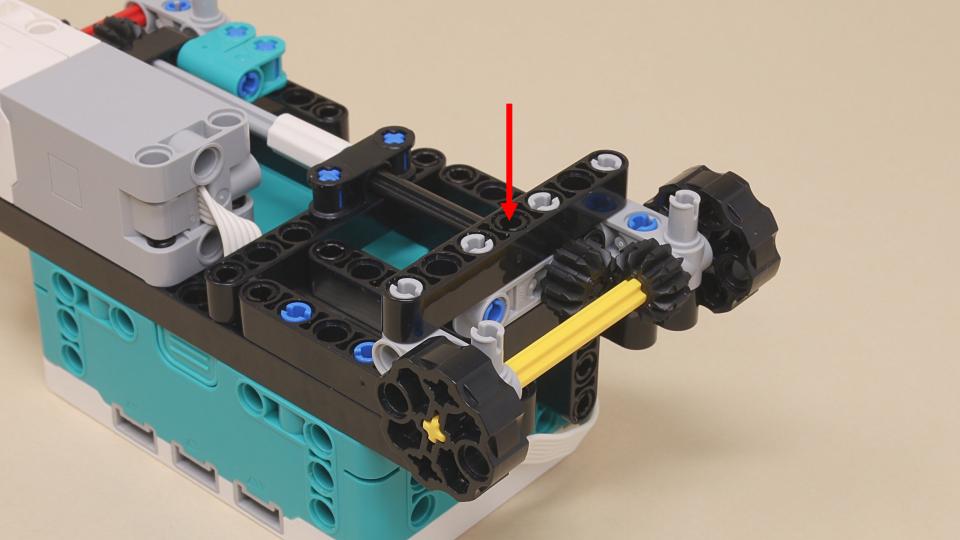


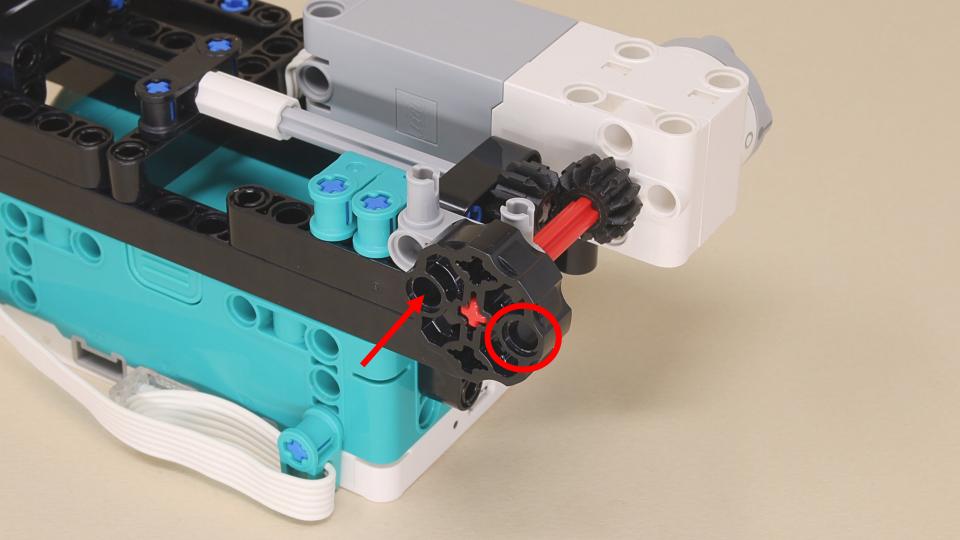


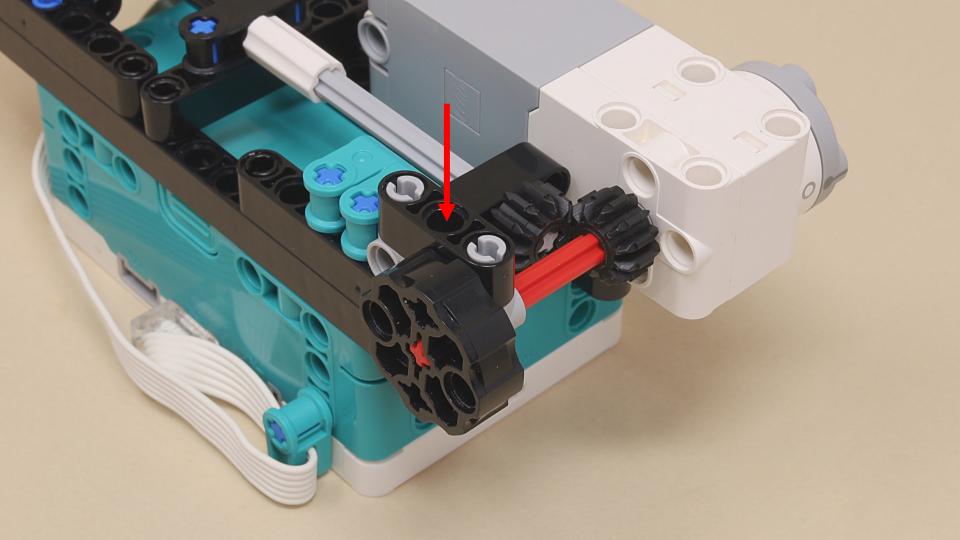




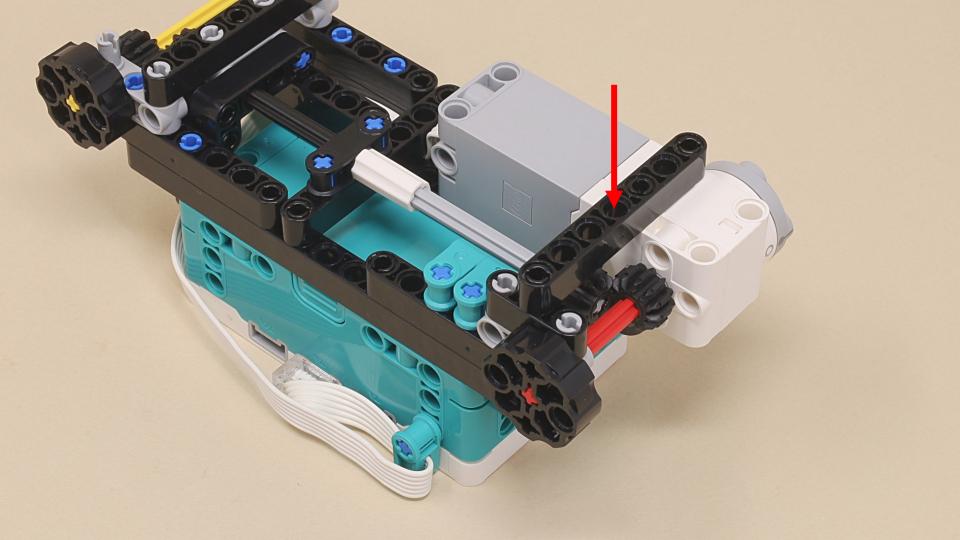

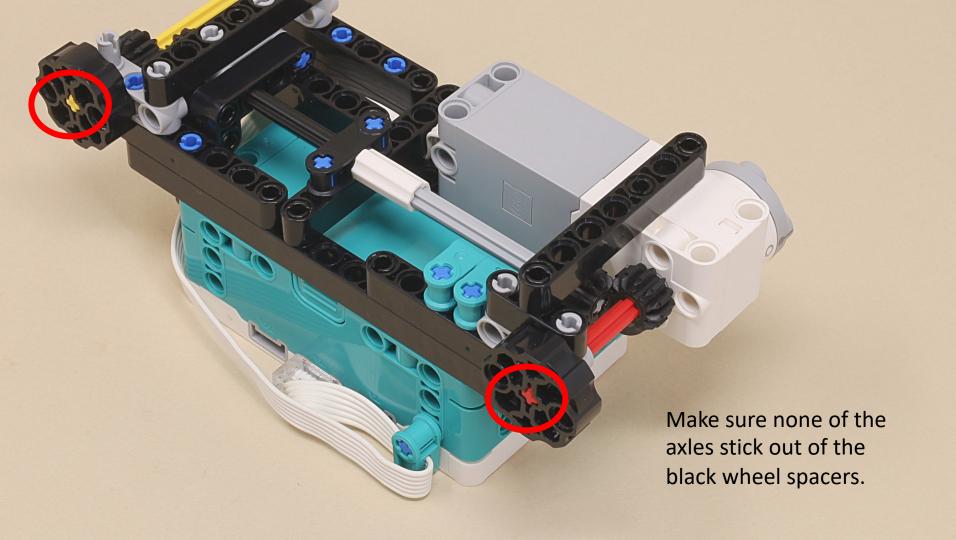

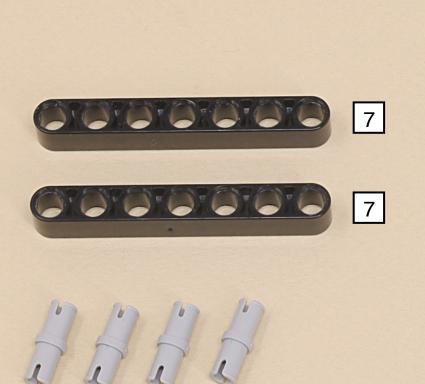


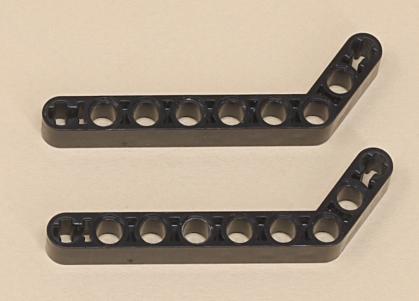










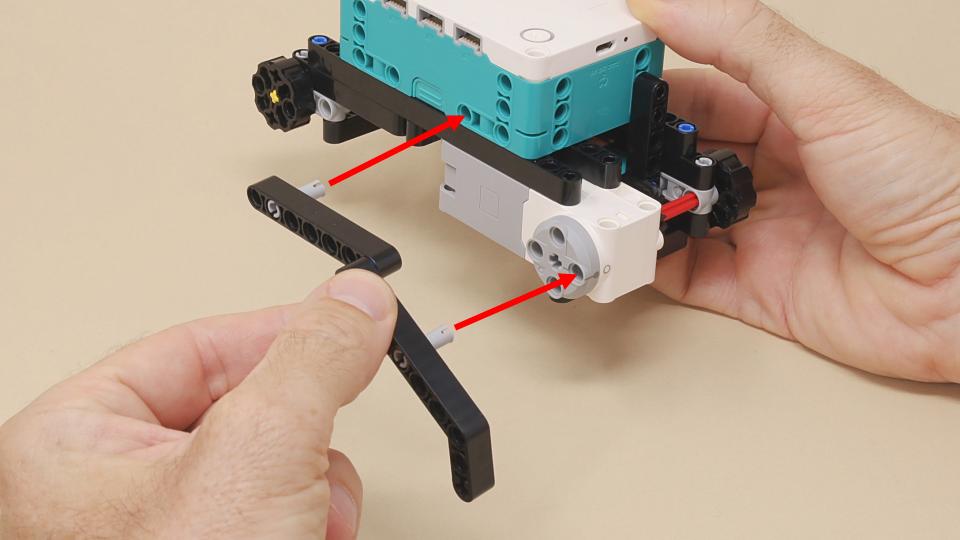

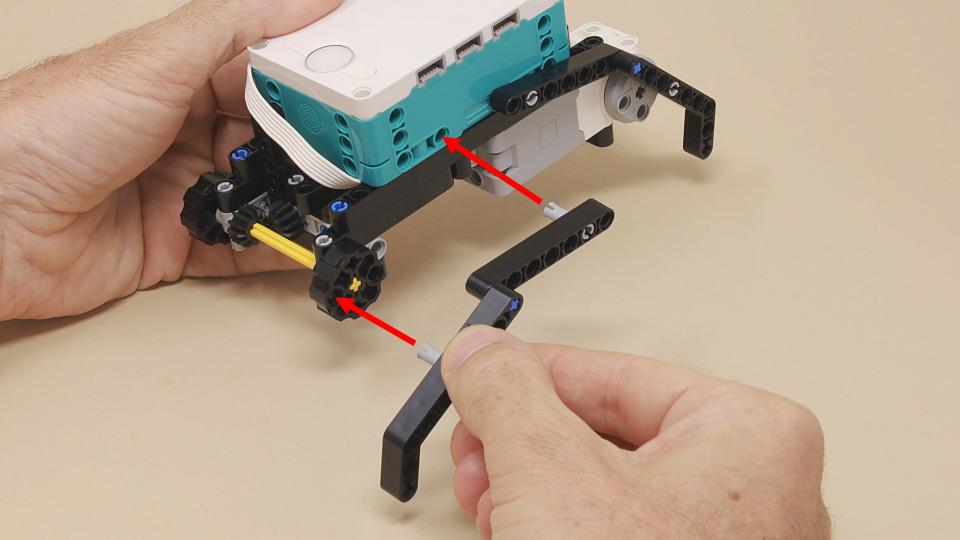

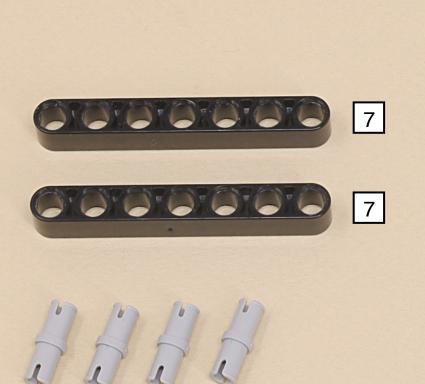

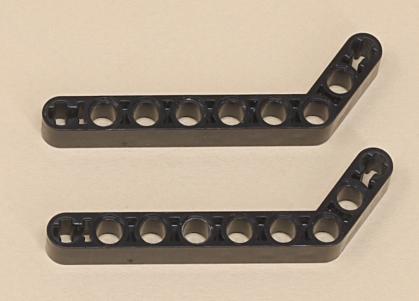











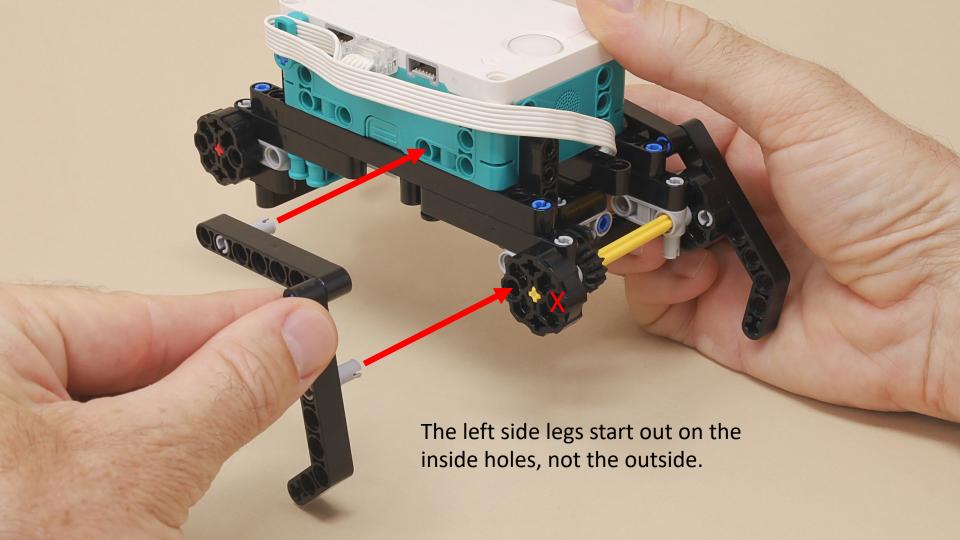

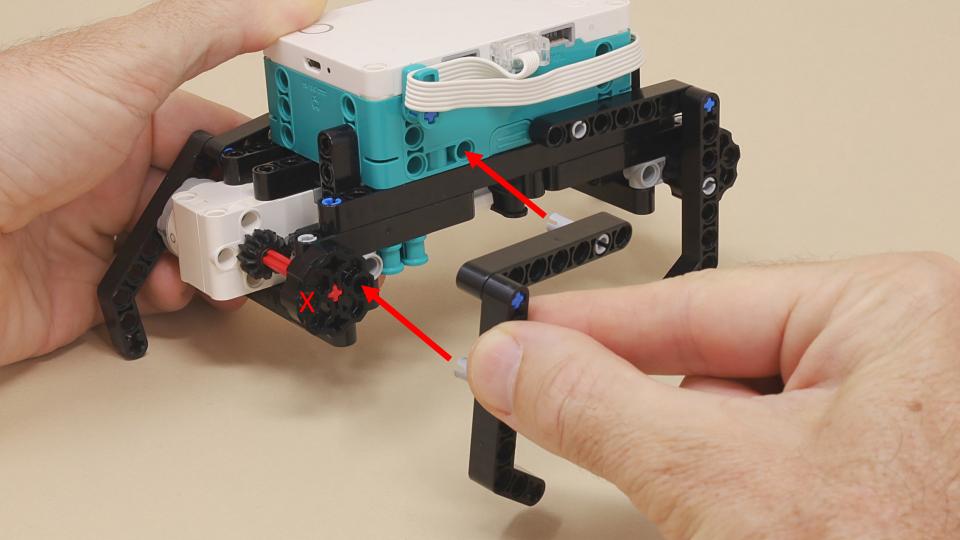

Check that the left and right sides are aligned as shown.

