
## Pickup Truck Chassis

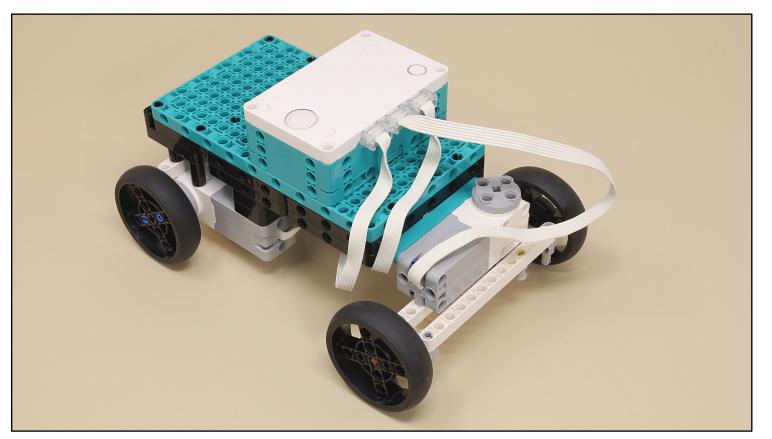


Scroll for building instructions





OneKitProjects.com


©2021 by Dave Parker

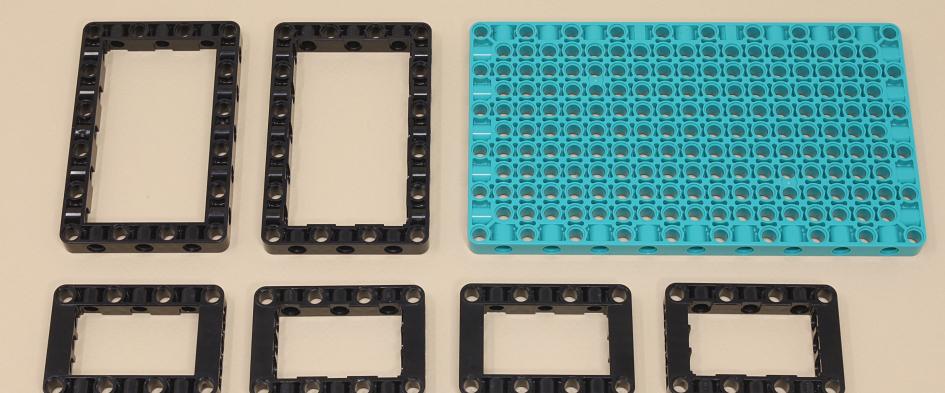



## 

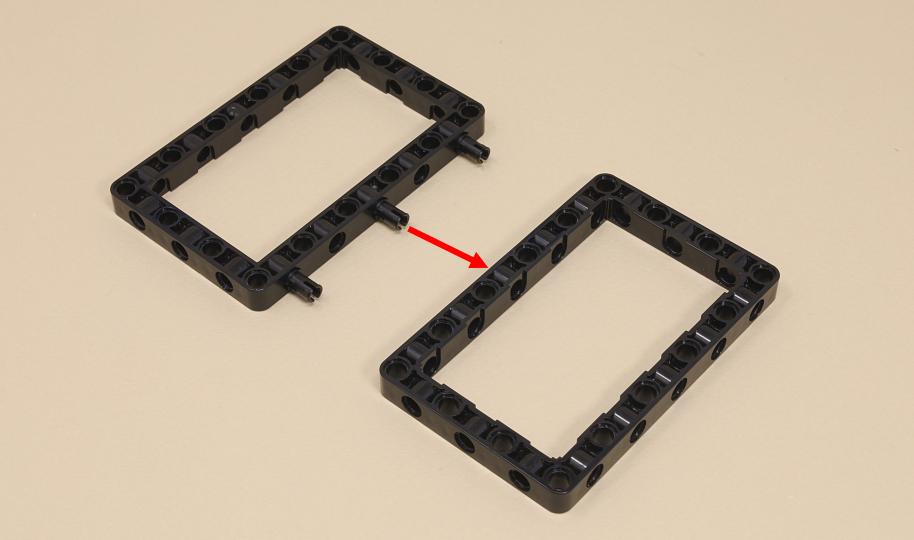

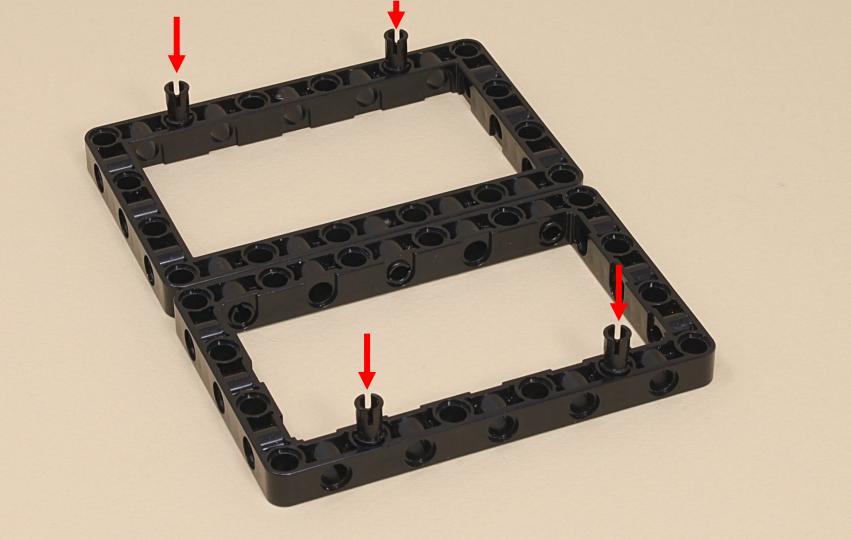

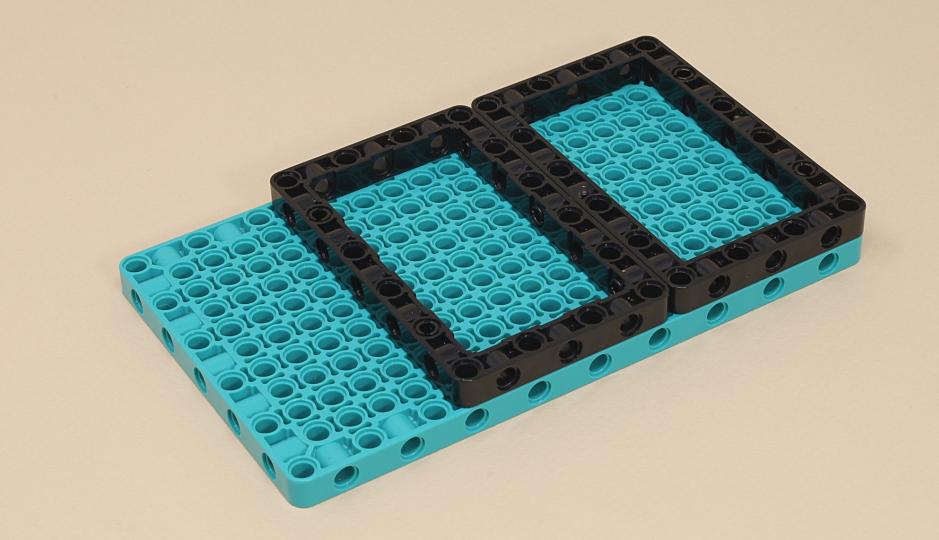

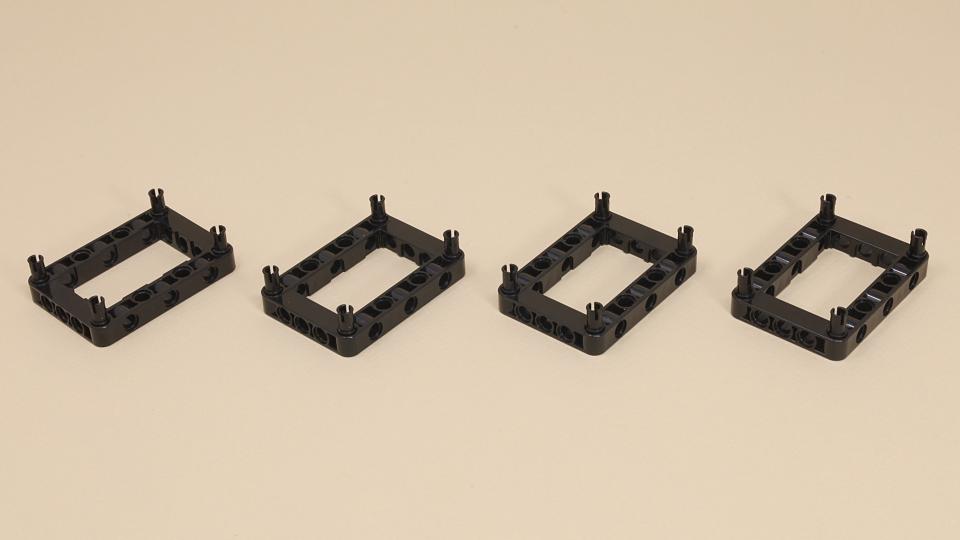

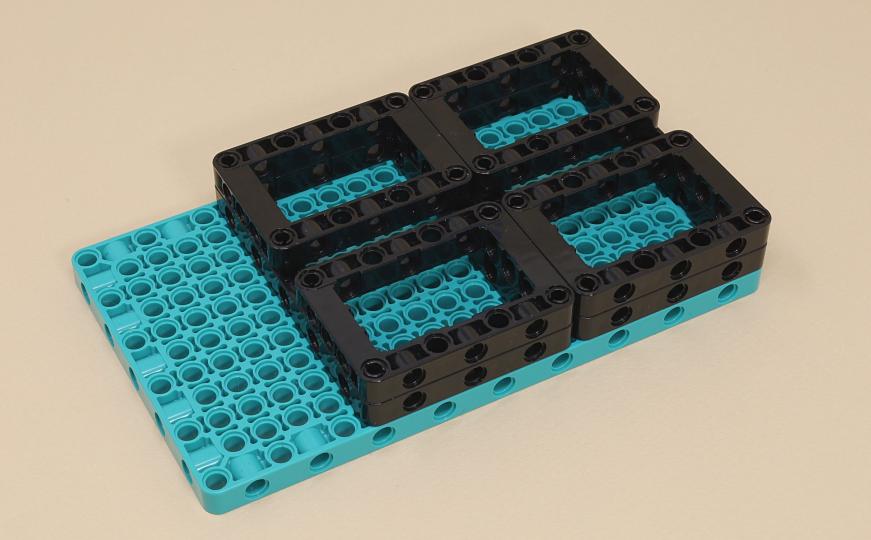



























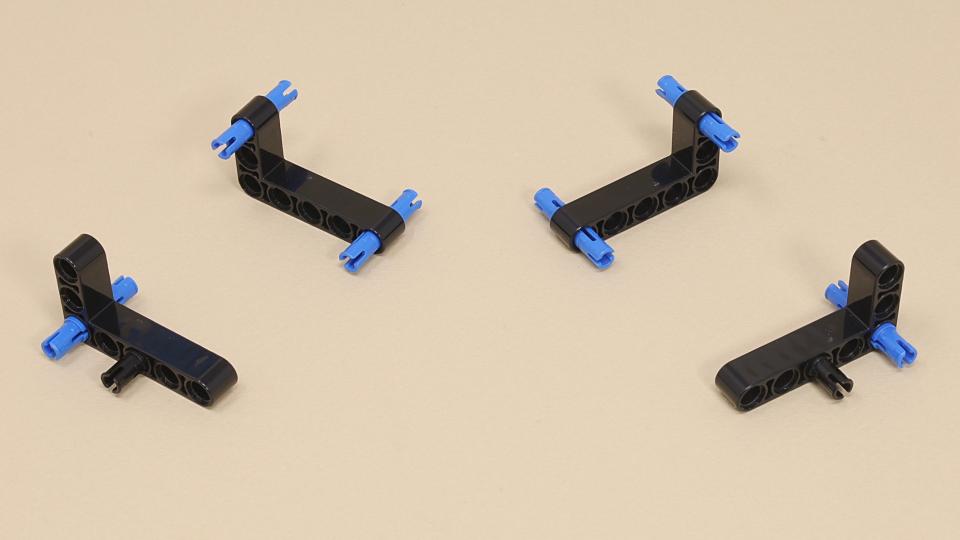





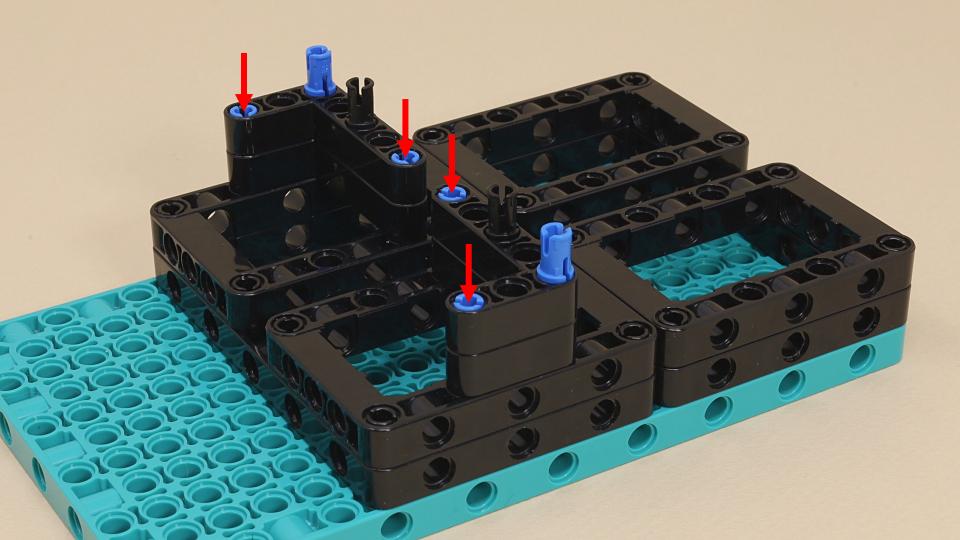








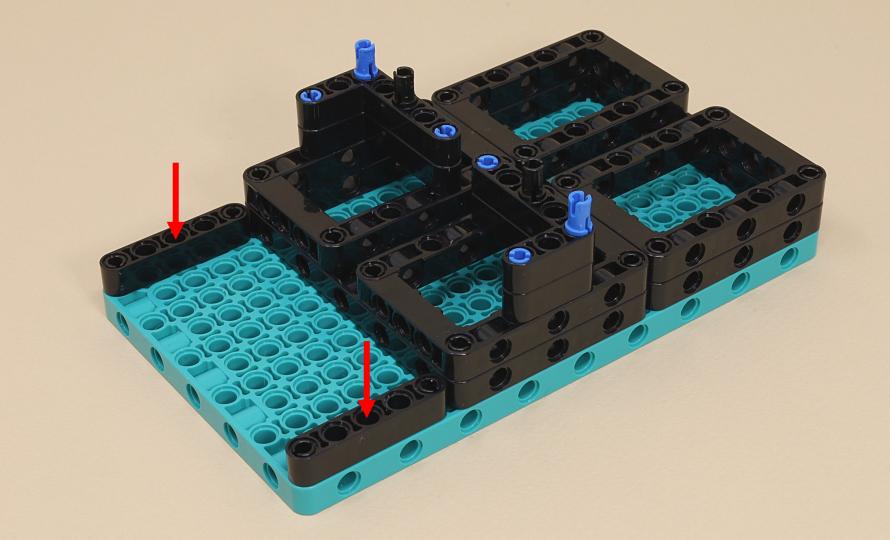


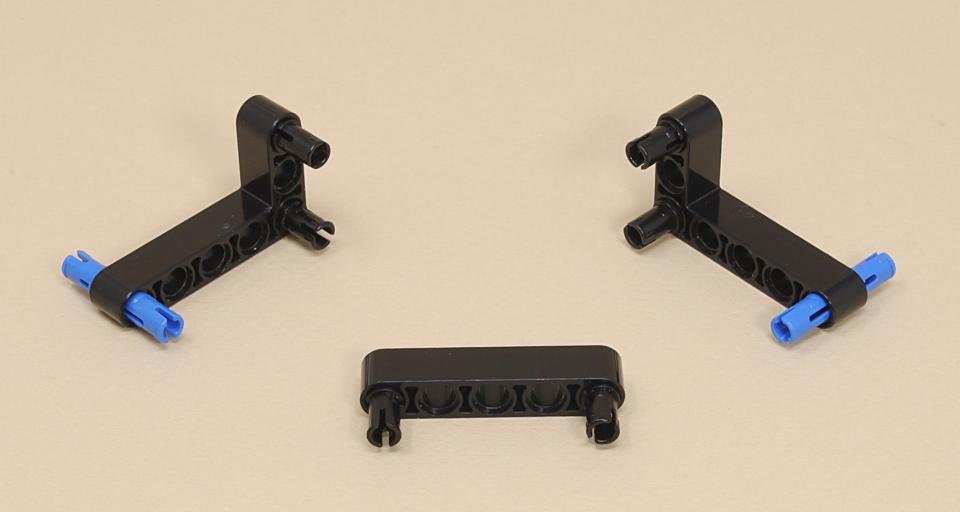


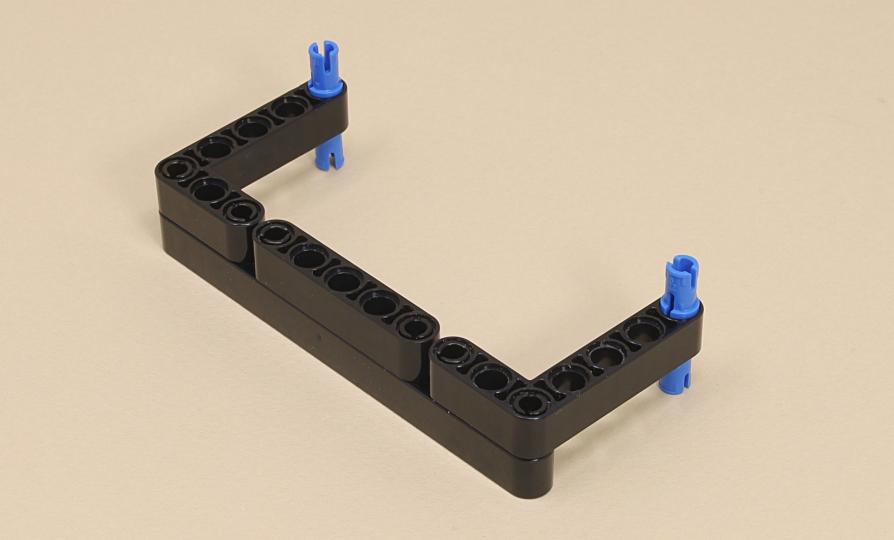


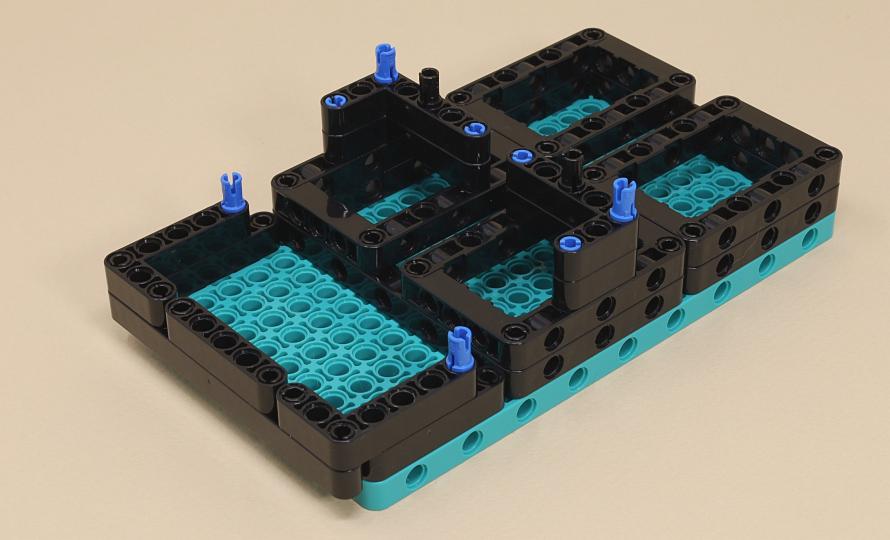


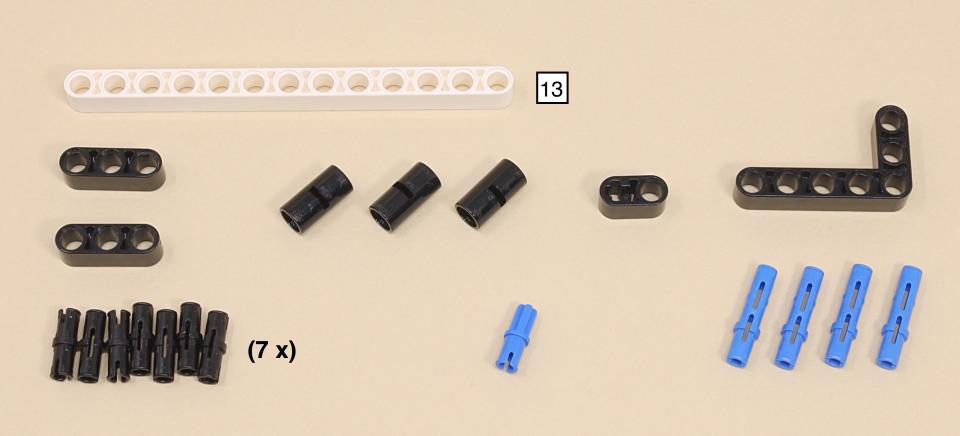


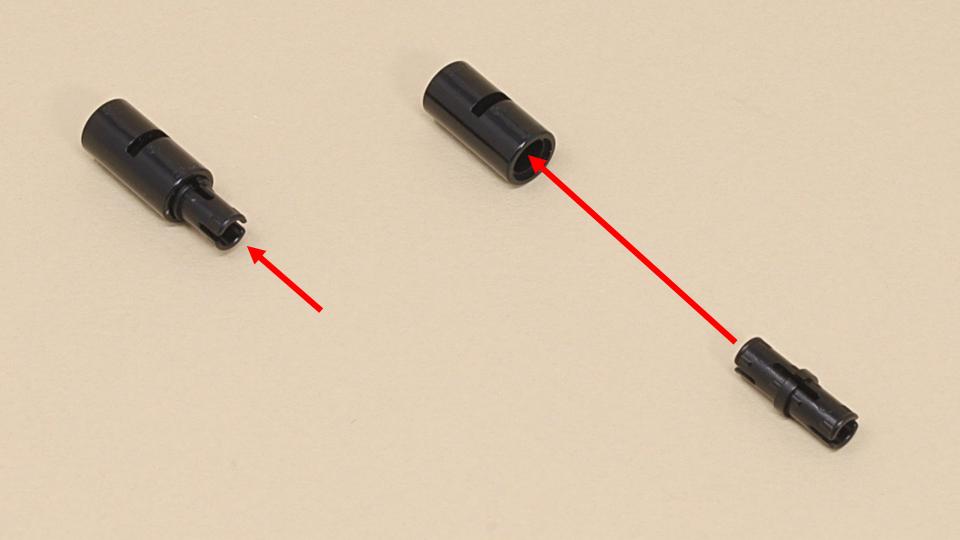


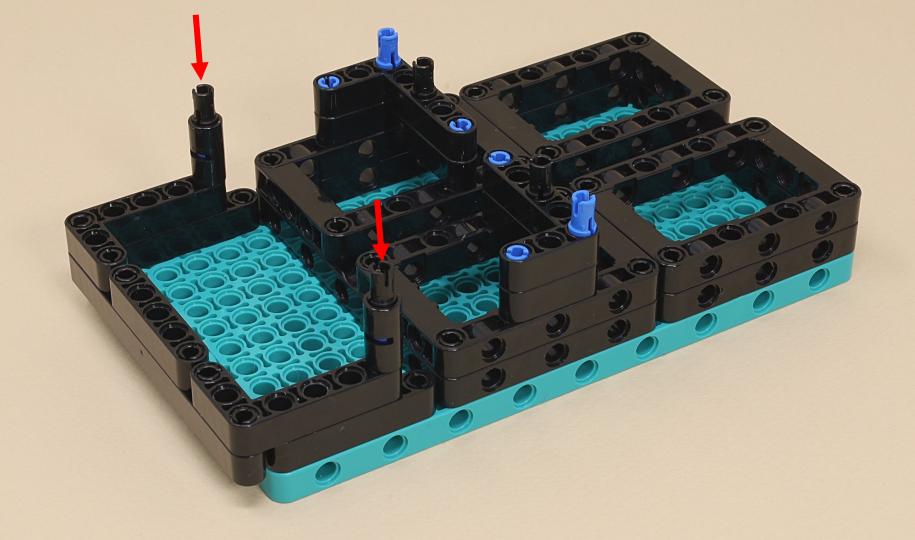


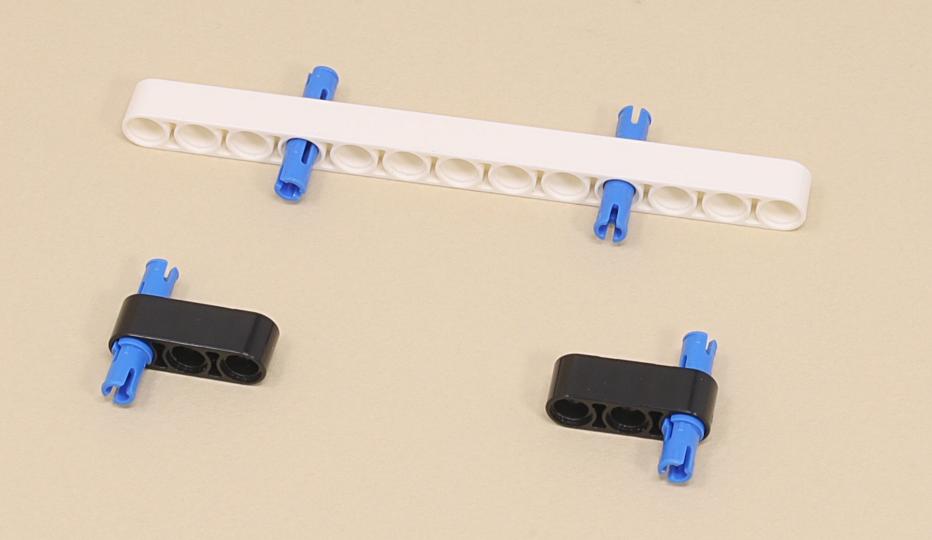


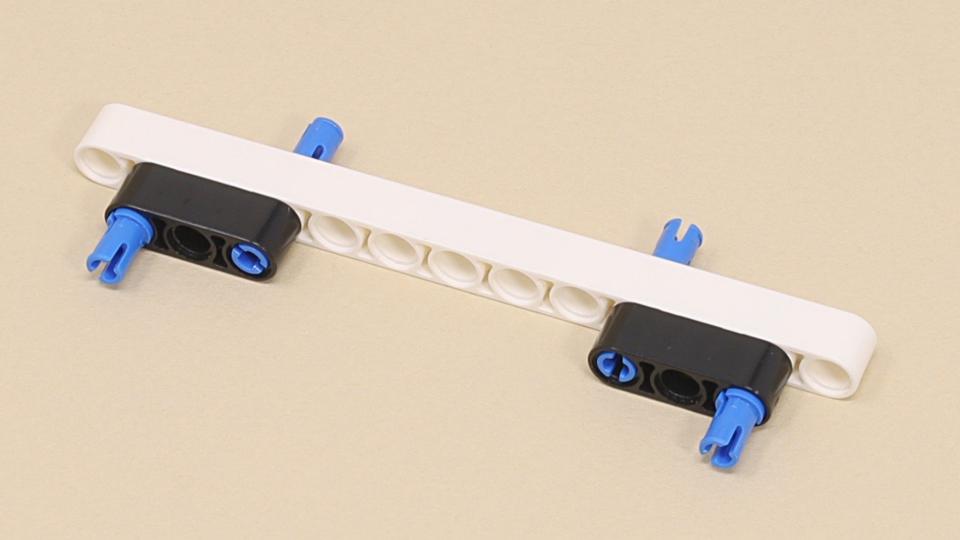


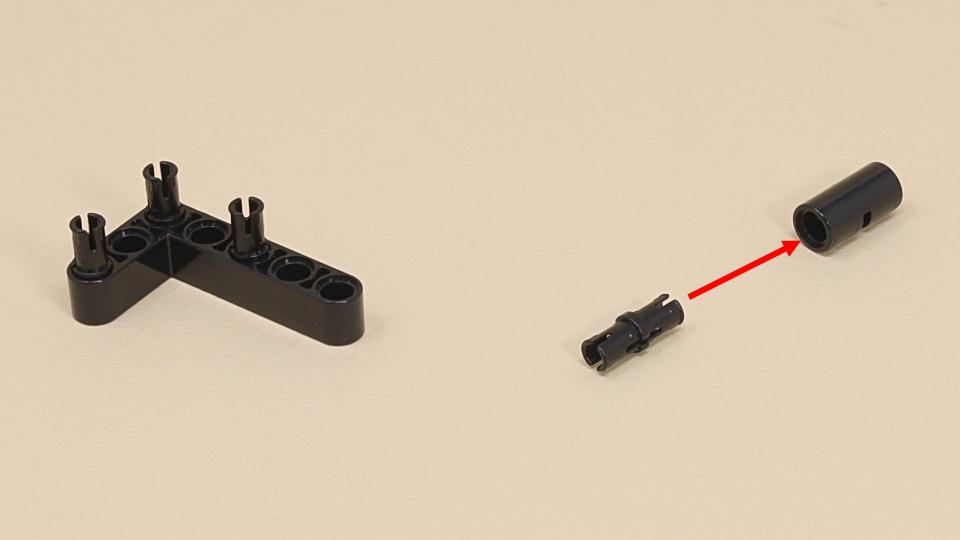

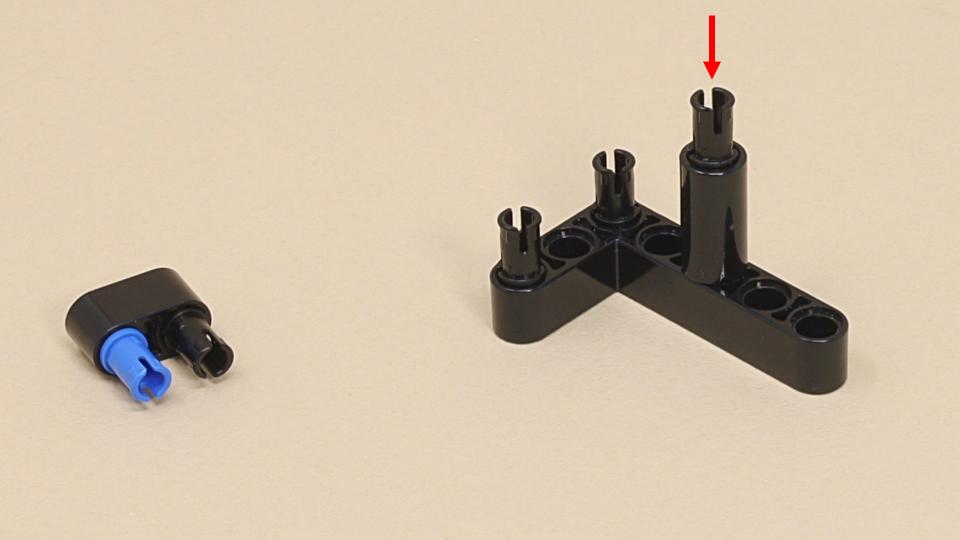

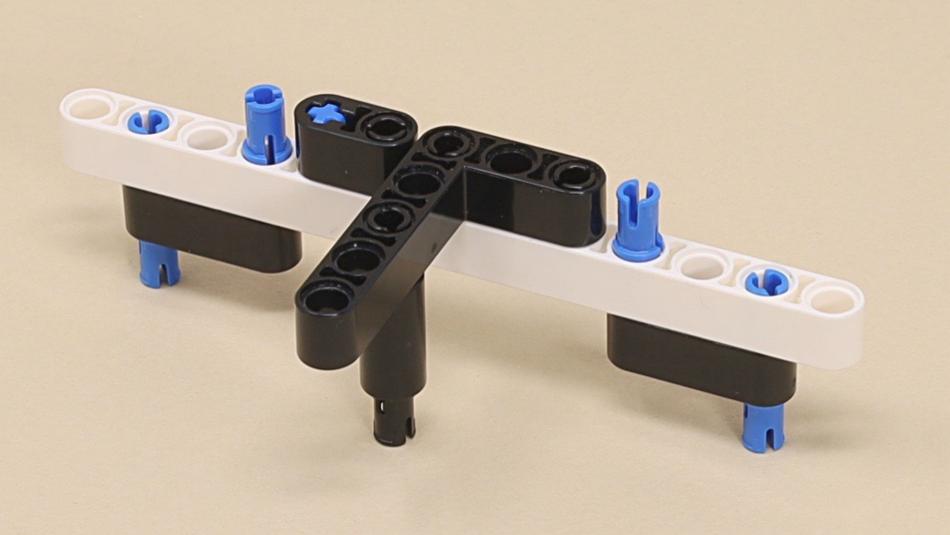

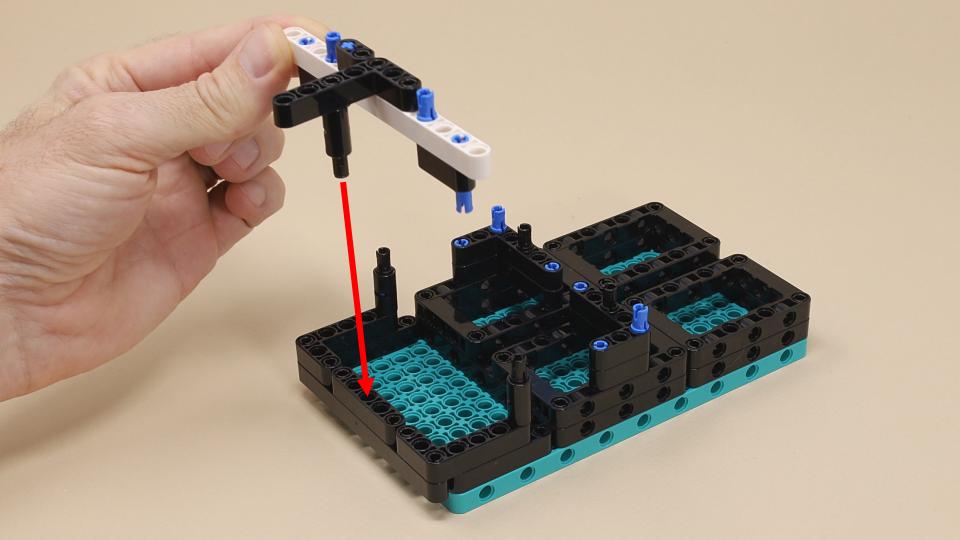

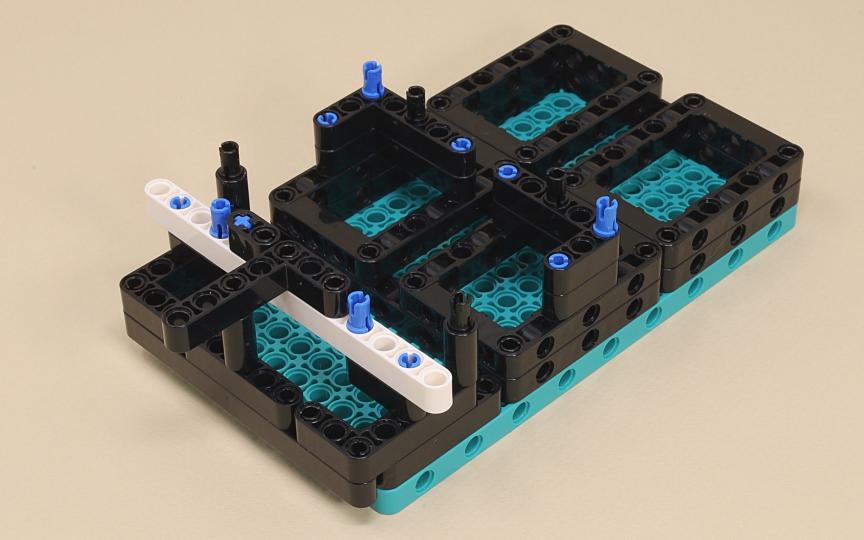

















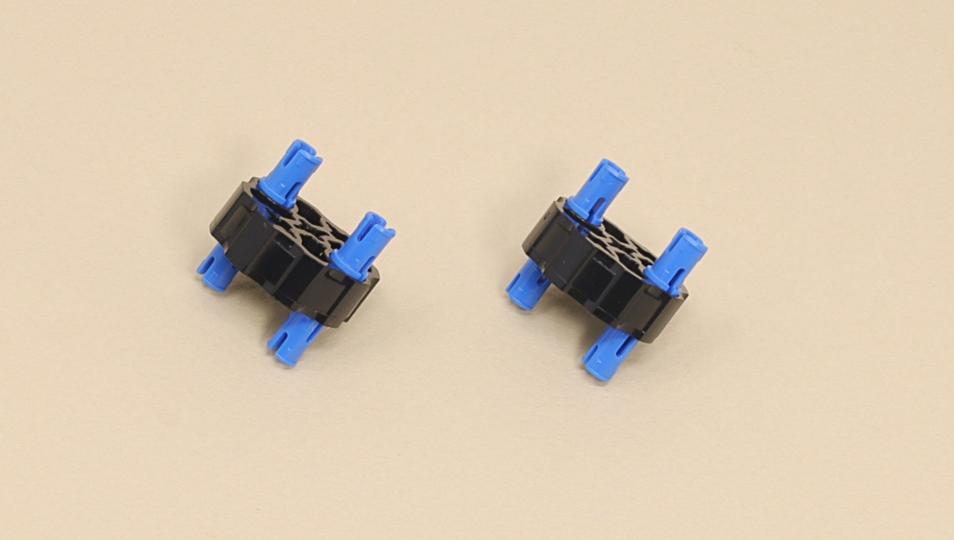


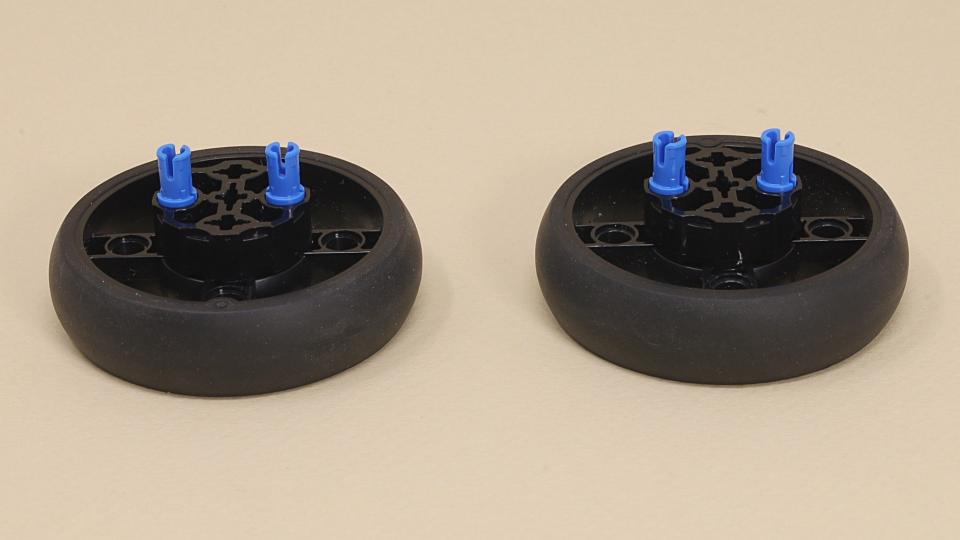





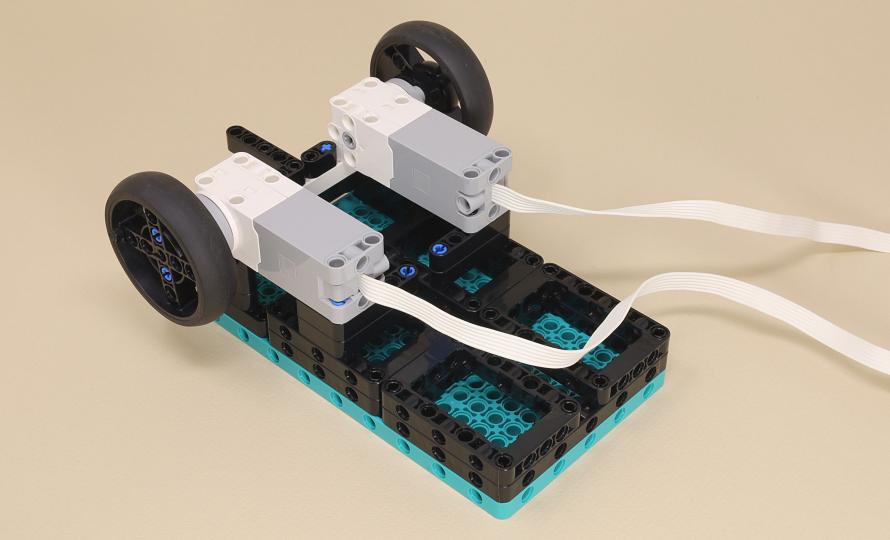


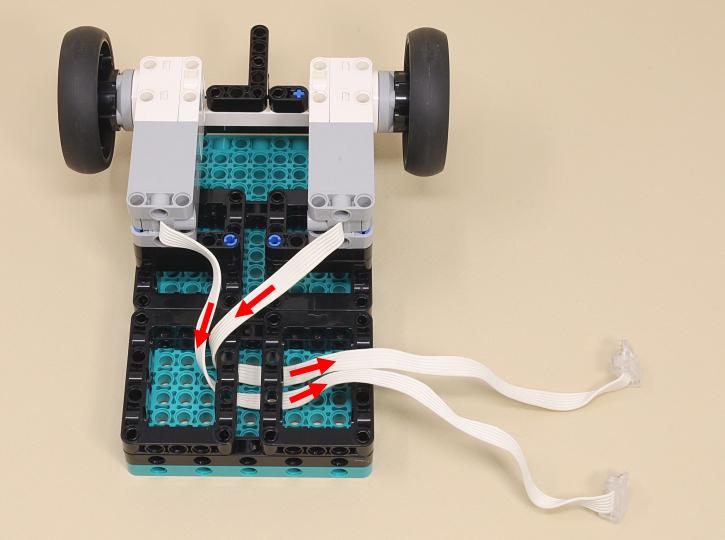


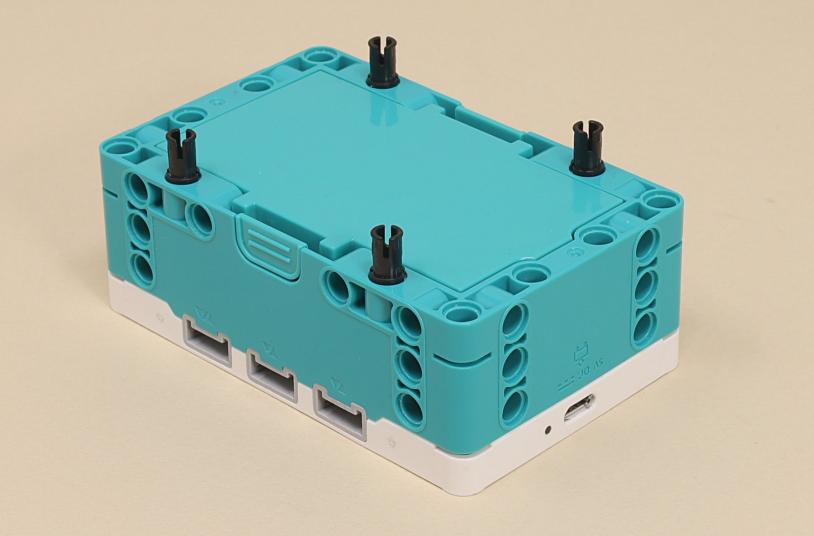


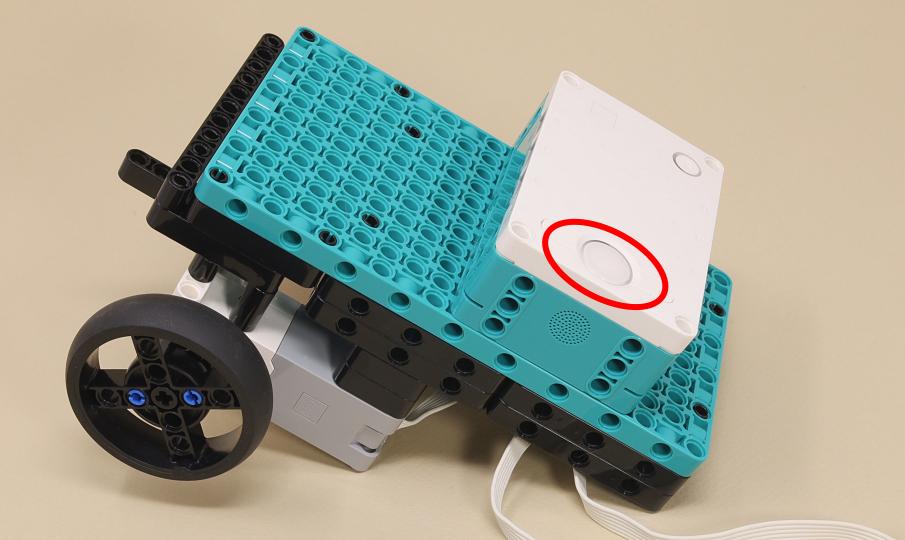

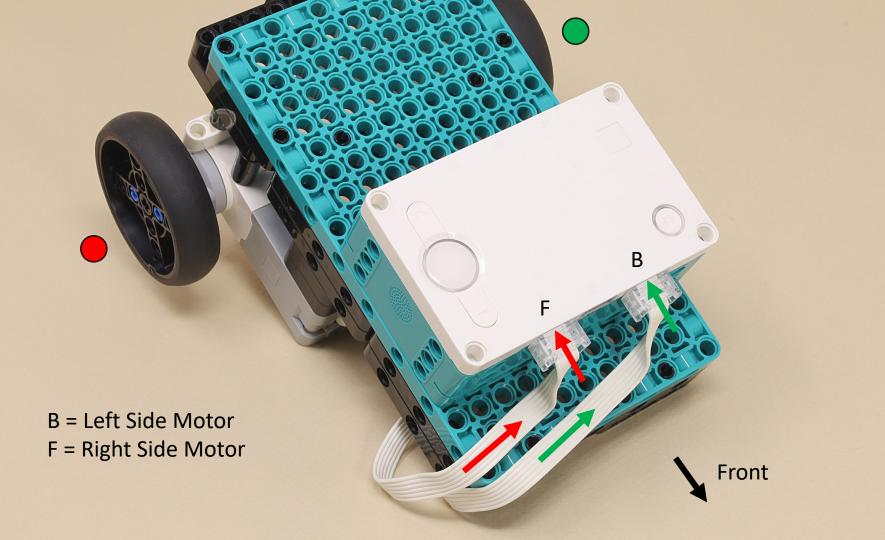


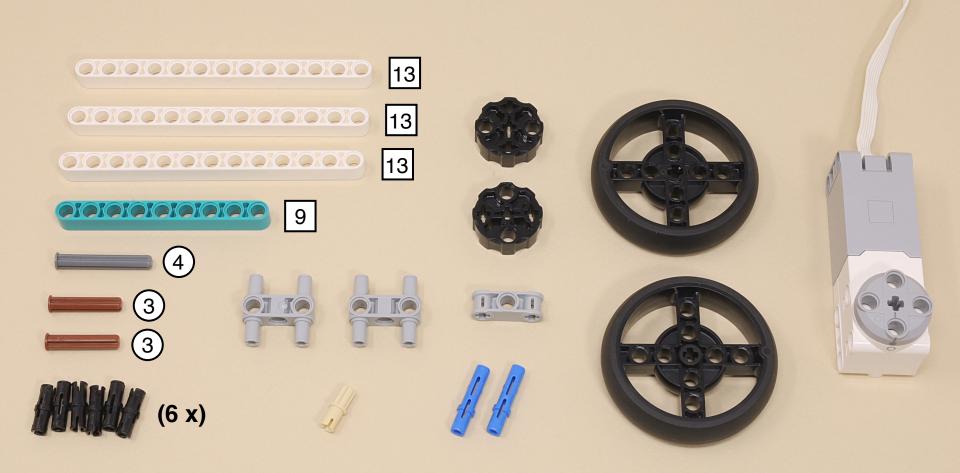


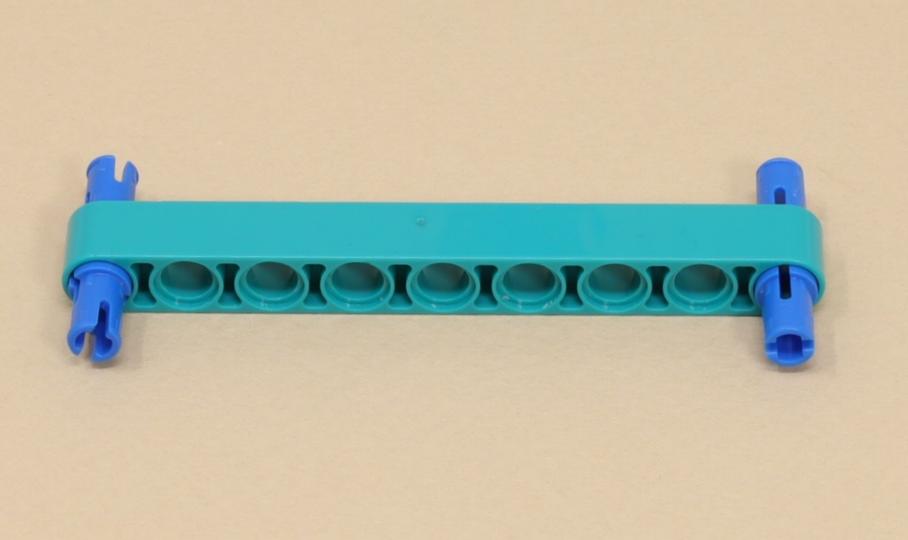


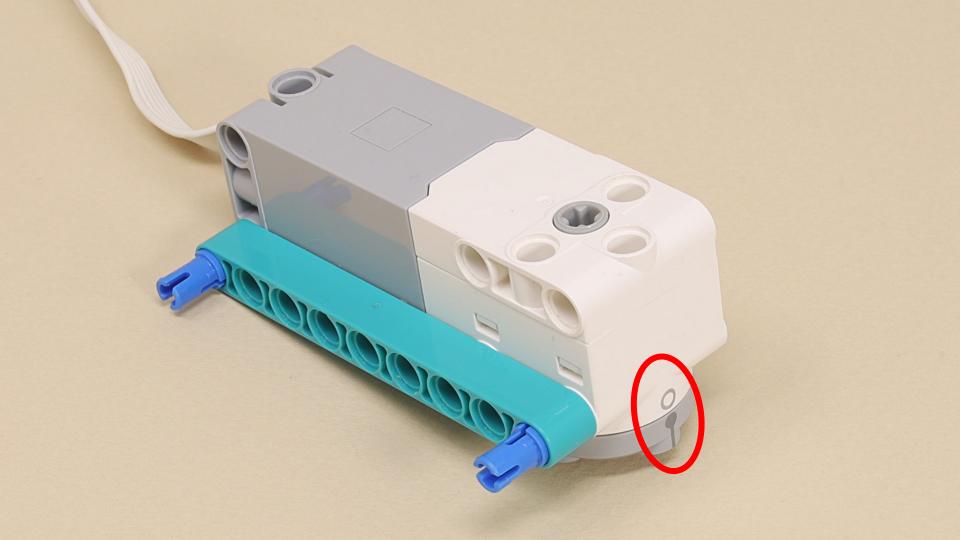



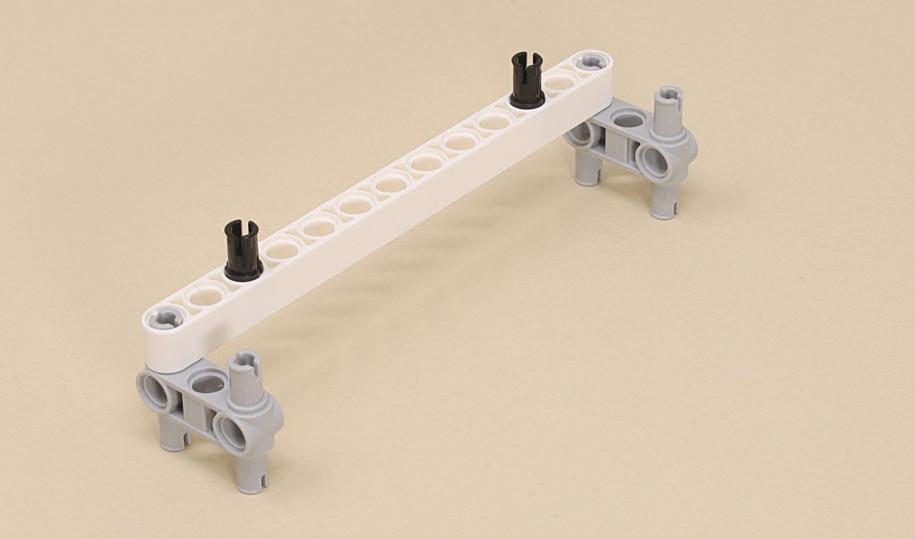

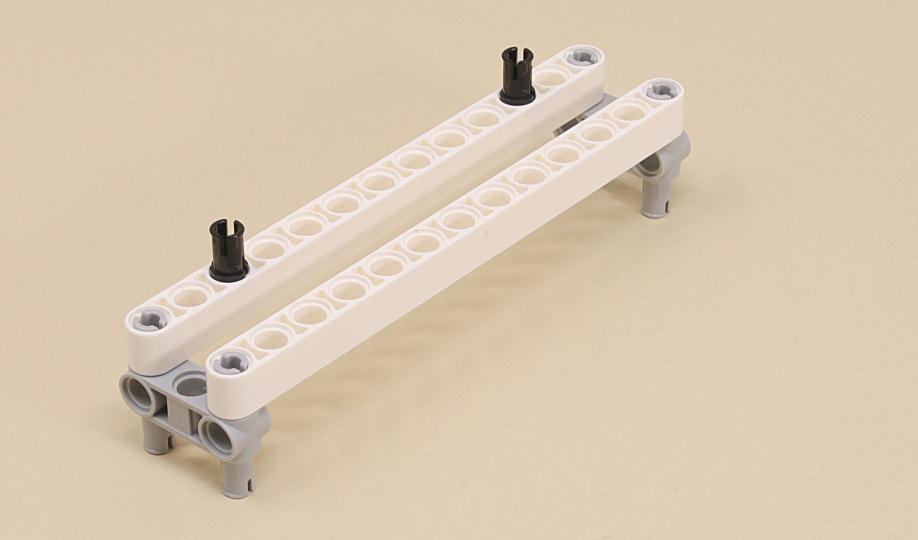


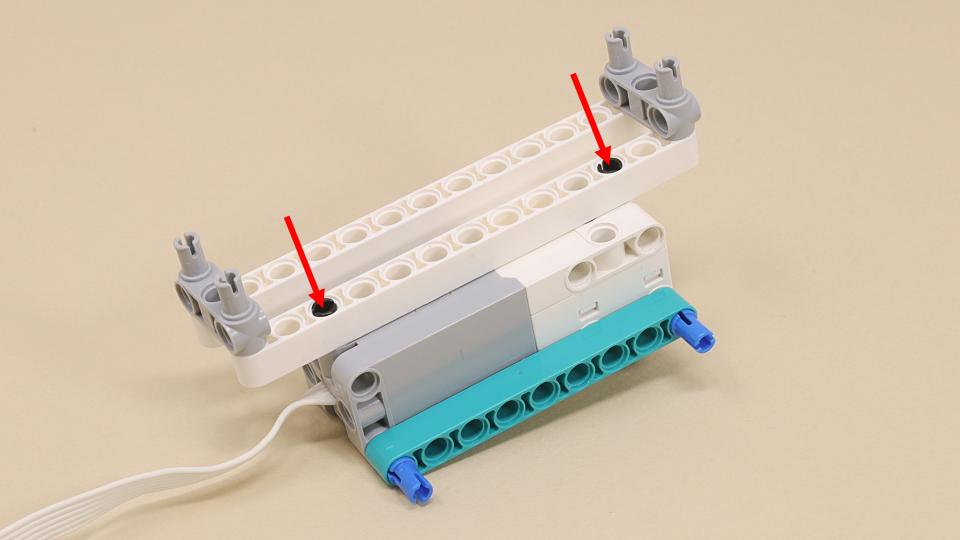










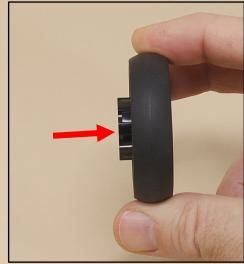


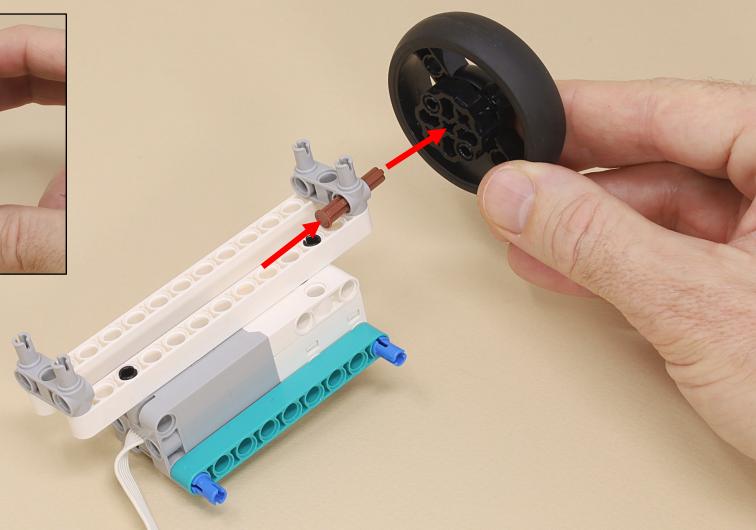

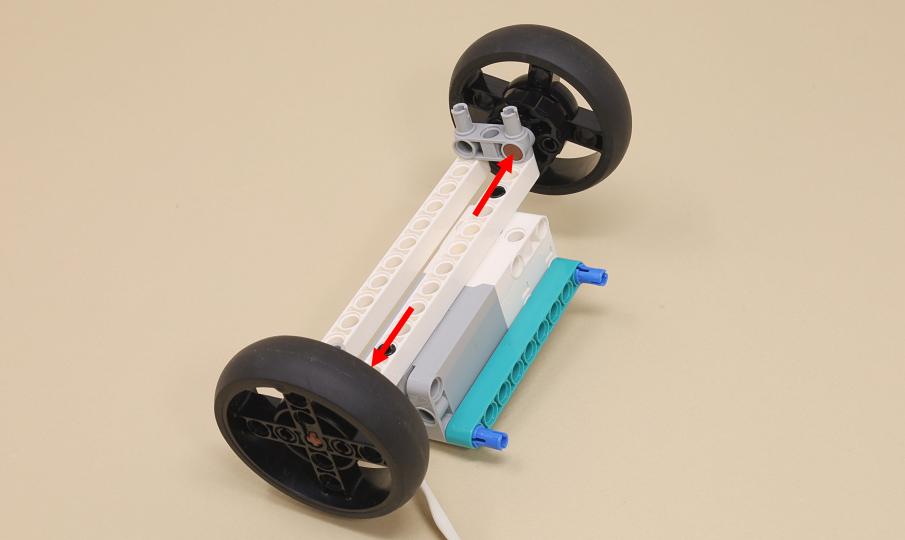



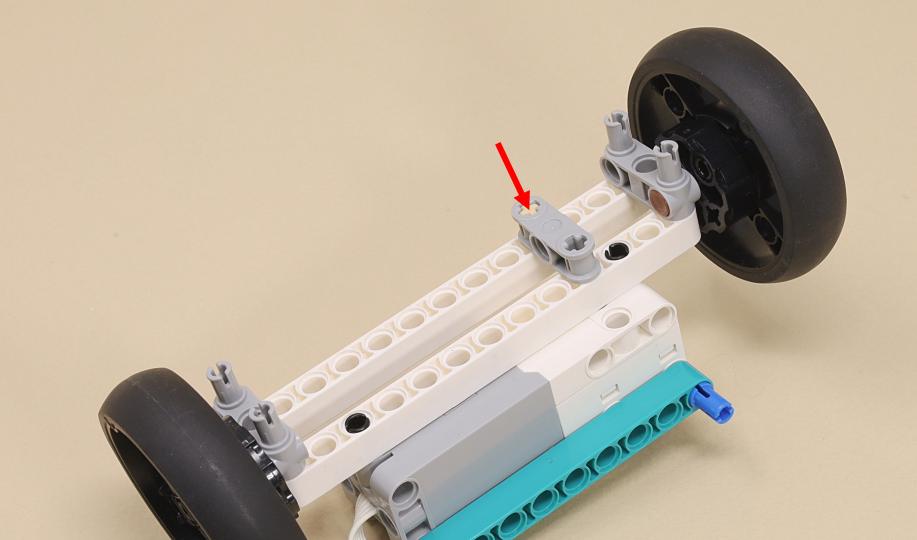

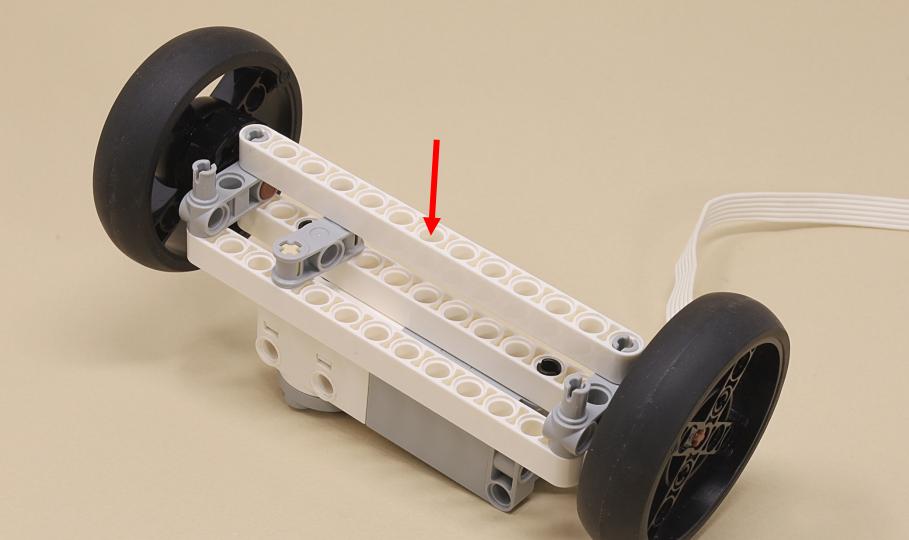

Make sure the wheels are aligned straight and the motor is in its zero position when you insert the axle. Push the axle all the way into the motor.

